

3. MAINTENANCE

SERVICE INFORMATION	3-1	CYLINDER COMPRESSION	3-11
MAINTENANCE SCHEDULE	3-3	EVAPORATIVE EMISSION CONTROL SYSTEM	3-12
< ENGINE >		< CHASSIS >	
FUEL LINES	3-4	BATTERY	3-13
FUEL FILTER	3-4	BRAKE FLUID	3-13
THROTTLE OPERATION	3-5	BRAKE SHOE/PAD WEAR	3-14
CARBURETOR CHOKE	3-6	BRAKE SYSTEM	3-14
AIR CLEANER	3-7	BRAKE LIGHT SWITCH	3-16
CRANKCASE BREATHER	3-7	HEADLIGHT AIM	3-16
SPARK PLUGS	3-8	CLUTCH	3-16
IGNITION SYSTEM	3-8	SIDE STAND	3-17
CARBURETOR SYNCHRONIZATION	3-9	SUSPENSION	3-17
CARBURETOR IDLE SPEED	3-10	WHEELS	3-18
RADIATOR COOLANT	3-10	STEERING HEAD BEARINGS	3-19
RADIATOR CORE	3-11	NUTS, BOLTS, FASTENERS	3-19
COOLING SYSTEM HOSES & CONNECTIONS	3-11		

SERVICE INFORMATION

GENERAL

- Engine oil See page 2-3
- Engine oil filter See page 2-3
- Final drive gear oil See page 2-11

SPECIFICATIONS

< ENGINE >

Spark plugs:

Standard		For cold climate (below 5°C, 41°F)		For extended high speed riding	
NGK	ND	NGK	ND	NGK	ND
DPR8EA-9	X24EPR-U9	DPR7EA-9	X22EPR-U9	DPR9EA-9	X27EPR-U9

Spark plug gap: 0.8–0.9 mm (0.031–0.035 in)