



## AIR CLEANER

Remove the right side cover.  
 Remove the air cleaner cover screws and cover.  
 Pull the air cleaner element holder out of the air cleaner case.

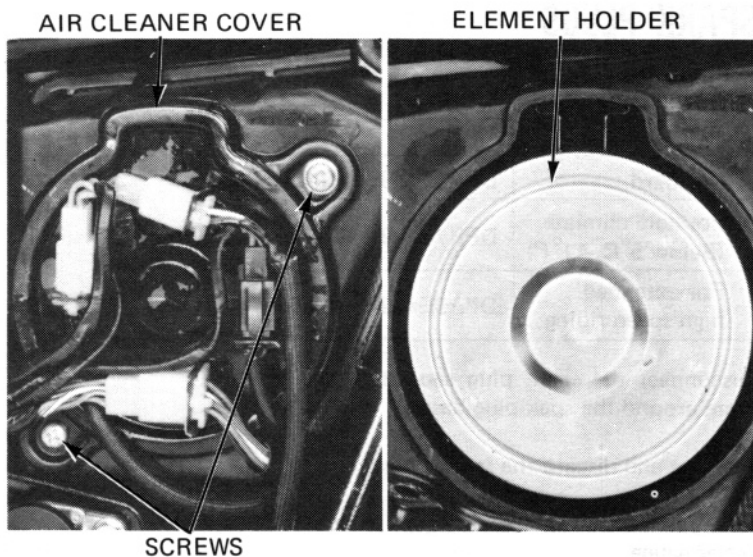

Wash the elements in non-flammable or high flash point solvent, squeeze out and let them dry.  
 Soak the elements in gear oil (SAE #80—#90) and squeeze out the excess.

Install the removed parts in the reverse order of disassembly.

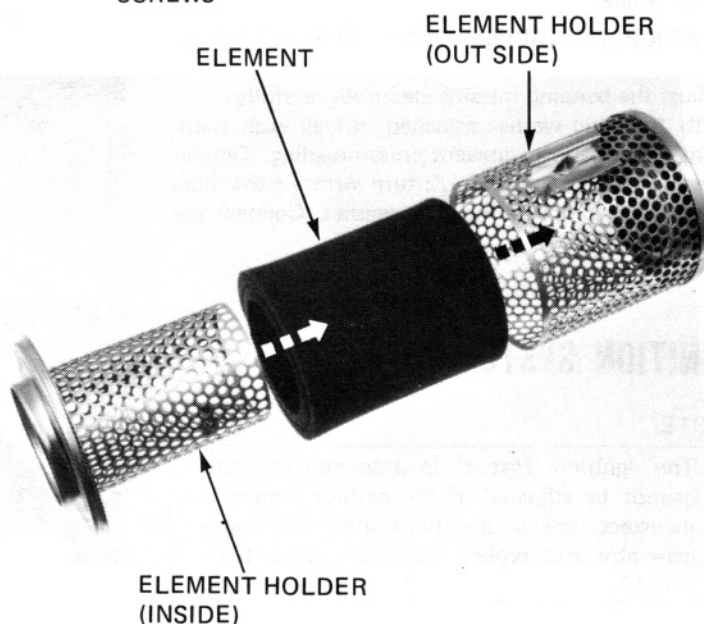

## CRANKCASE BREATHER

Remove the plug from the drain tube to empty any deposits.

Install the drain plug.

**NOTE:**

Service more frequently when riding in rain, or at full throttle, or if the deposit level can be seen in the transparent section of the drain tube.

