

MAINTENANCE

BRAKE SHOE/PAD WEAR


BRAKE PAD WEAR

Check the brake pads for wear by looking through the slot indicated by the arrow cast on the caliper assembly.

Replace the brake pads if the wear line on the pads reaches the edge of the brake disc (page 17-5).


CAUTION:

Always replace the brake pads as a set to assure even disc pressure.

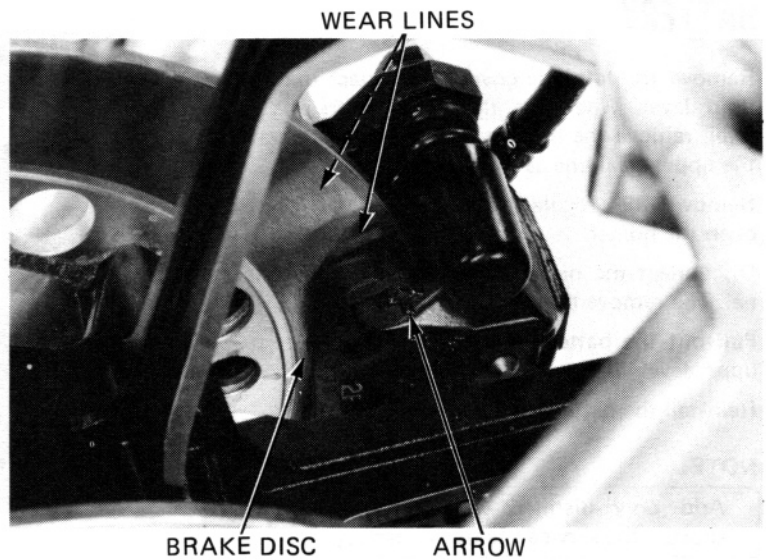

BRAKE SHOE INSPECTION

Replace the brake shoes if the arrow on the brake arm aligns with the reference mark "Δ" on full application of the rear brake pedal.

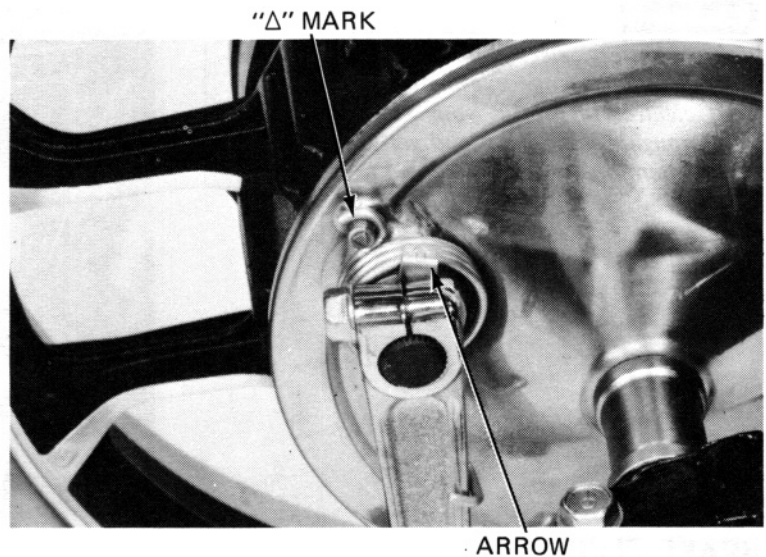

BRAKE SYSTEM

Inspect the brake hoses and fittings for deterioration, cracks and signs of leakage. Tighten any loose fittings.

Replace hoses and fittings as required.

BRAKE PEDAL HEIGHT

Adjust brake pedal height so the pedal is 20 mm (3/4 in) above the top of the foot peg.

CAUTION:

Incorrect brake pedal height can cause brake drag.

