


MAINTENANCE

REAR

Place the motorcycle on its center stand.

Move the rear wheel sideways with force to see if the swingarm bearings are worn. Replace the bearings if there is any looseness (page 16-5).
Check the shock absorbers for leaks or damage.

Tighten all rear suspension nuts and bolts.

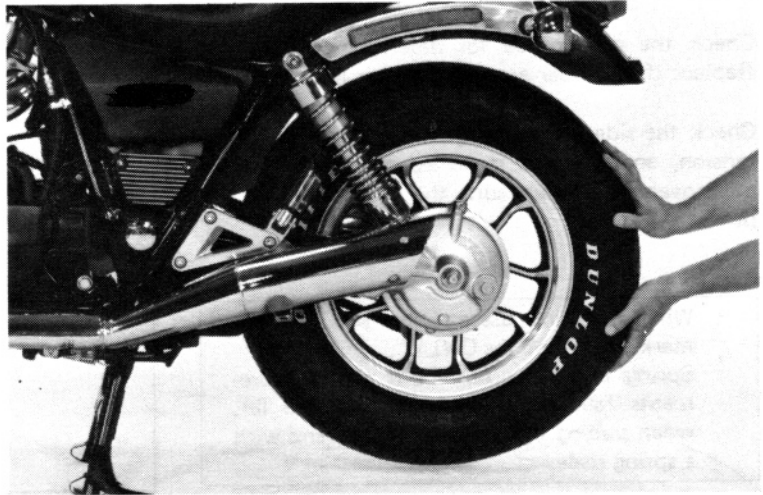

WHEELS

NOTE:

Tire pressure should be checked when tires are COLD.

Check the tires for cuts, imbedded nails, or other sharp objects.

RECOMMENDED TIRES AND PRESSURES:

		Front	Rear
Tire size		110/90-19 62H	140/90-15 70H
Cold tire pressure psi (kPa, kg/cm ²)	Up to 90 kg (200 lbs) load	32 (225, 2.25)	32 (225, 2.25)
	90 kg (200 lbs) load to vehicle capacity load	32 (225, 2.25)	40 (280, 2.8)
Tire brand	BRIDGE- STONE	L303	G508
	DUNLOP	F11	K627C

Check the front and rear wheels for trueness (page 15-15 and 16-5).

Measure the tread depth at the center of the tires.

Replace the tires if the tread depth reaches the following limits:

Minimum tread depth:

Front: 1.5 mm (1/16 in)
Rear: 2.0 mm (3/32 in)

