



Inspect the float valve for grooves and nicks.

Inspect the operation of the float valve.

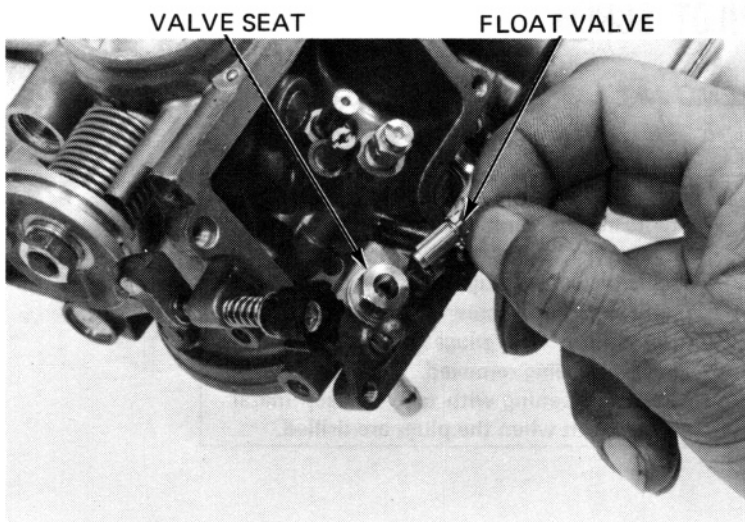

Remove the main jet, needle jet holder and slow jet.

Remove the float valve seat and filter.

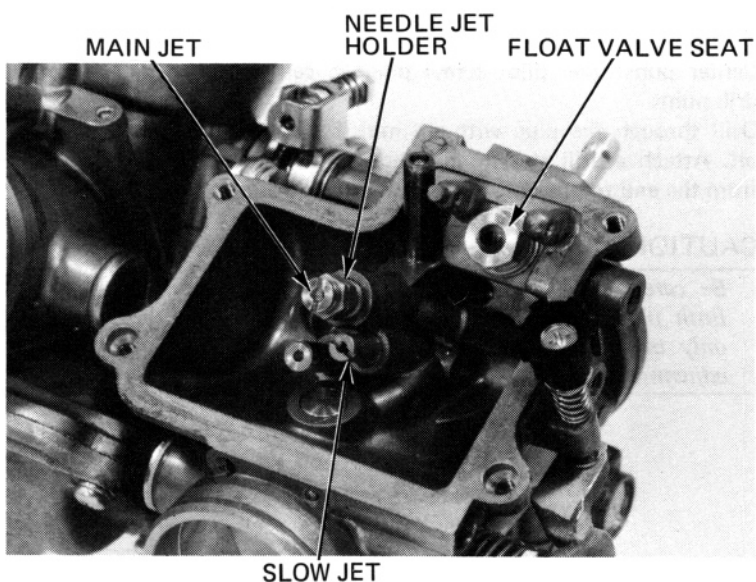

Inspect the float valve seat and filter for grooves, nicks or deposits.

ASSEMBLY

Assemble the float chamber components in the reverse order of disassembly.

