

Turn each pilot screw in and carefully count the number of turns before it seats lightly. Make a note of this to use as a reference when reinstalling the pilot screws.

CAUTION:

Damage to the pilot screw seat will occur if the pilot screw is tightened against the seat.



Remove the pilot screws and inspect them. Replace them if they are worn or damaged.

INSTALLATION

Install the pilot screws and return them to their original position as noted during removal. Perform pilot screw adjustment if new pilot screws are installed (page 4-12).

NOTE:

- Do not install new plugs on new pilot screw holes until after adjustment has been made.
- If you replace the pilot screw in one carburetor, you must replace the pilot screw in the other carburetor for proper pilot screw adjustment.

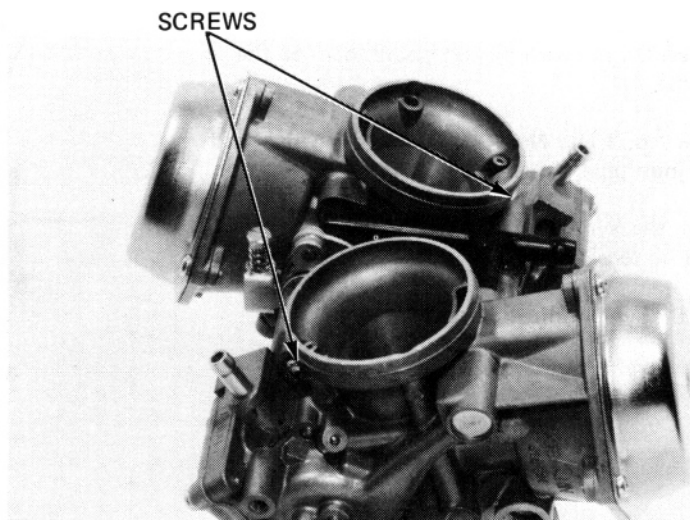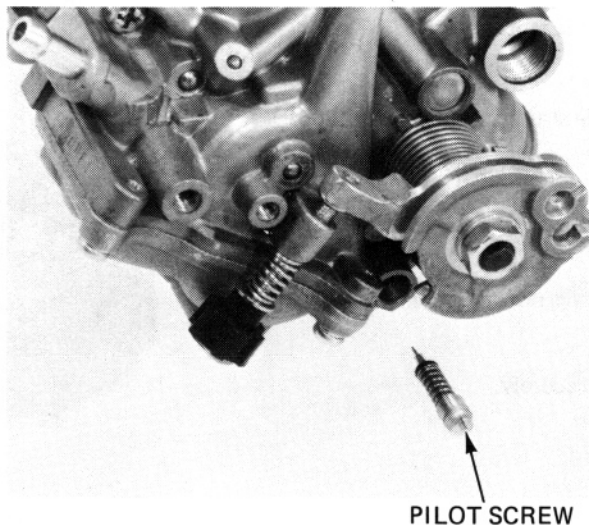

CARBURETOR SEPARATION

Remove the two screws assembling the carburetors.

Carefully separate the No. 1 and No. 2 carburetors.

