



Turn the throttle stop screw to align the No. 1 throttle valve with the edge of the by-pass hole.

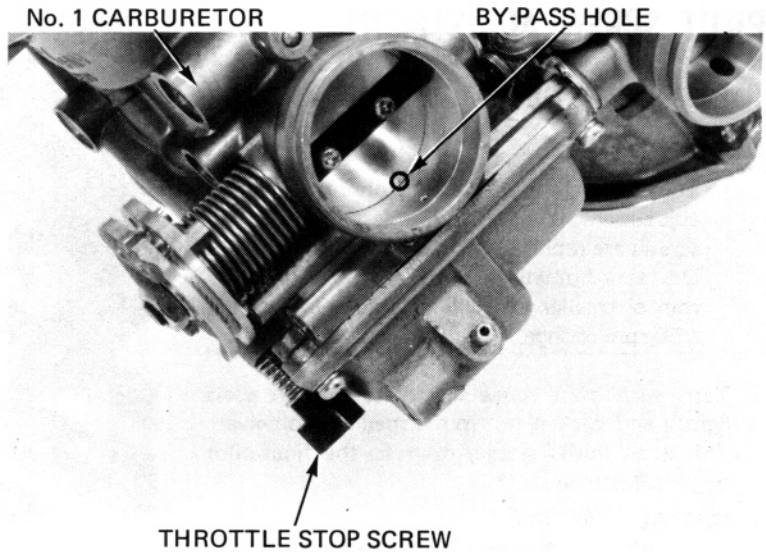

Align the No. 2 throttle valve with the by-pass hole edge by turning the synchronization adjusting screw.

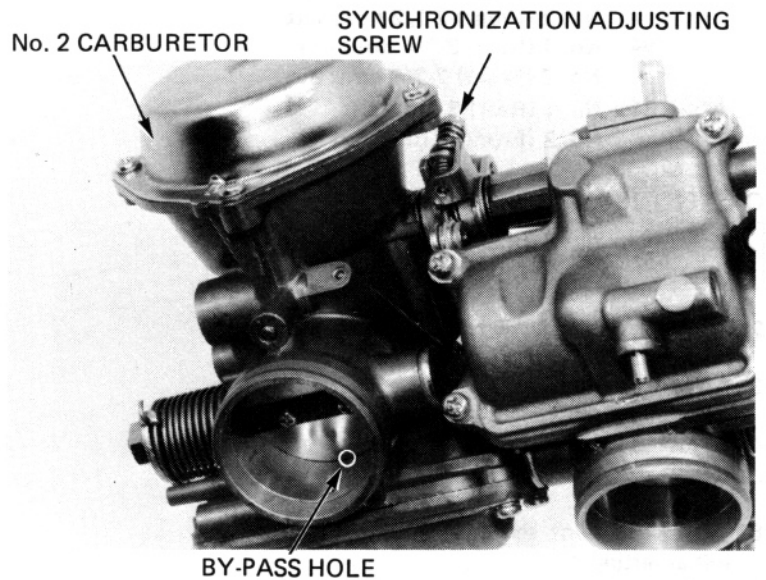

Inspect throttle operation as described below:

- Open the throttle slightly by pressing on the throttle linkage. Then release the throttle.
- Make sure that it returns smoothly.
- Make sure that there is no drag when opening and closing the throttle.

CARBURETOR INSTALLATION

Installation is essentially the reverse of removal.

NOTE:

Rough the throttle and choke cables properly (page 1-9 to 1-11).

Perform the following inspections and adjustments.

- Throttle operation (page 3-5).
- Carburetor choke (page 3-6).
- Carburetor idle speed (page 3-10).
- Carburetor synchronization (page 3-9).

