


## AIR CUT VALVE (After '84)

Remove the air cut valve bracket from the carburetor.

### CAUTION:

*Do not disassemble the air cut valve.*

Install the air cut valve in the reverse order of removal.

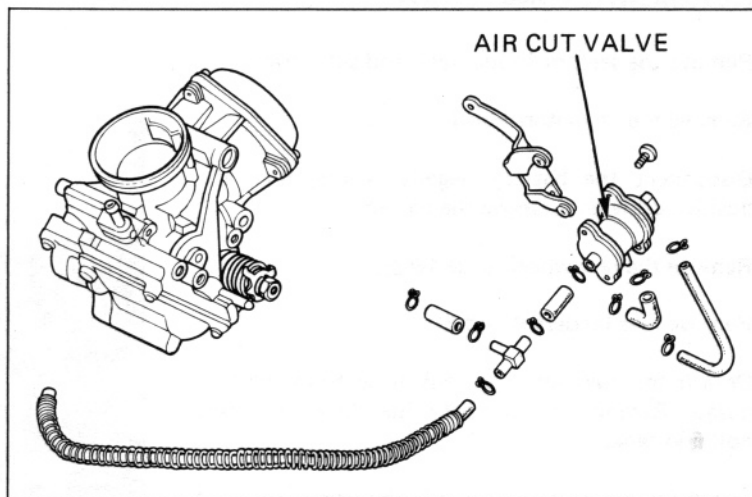

## FUEL TANK

### WARNING

*Do not allow flames or sparks near gasoline.  
Wipe up spilled gasoline at once.*

Turn the fuel valve OFF and disconnect the fuel line at the fuel filter.

Turn the fuel valve ON and drain the fuel into a clean container.

Disconnect the fuel lines at the auxiliary fuel tank and remove the fuel tank mount bolts and tank.

Check the vent hole of the filler cap for blockage.

Make sure that there are no fuel lea

