

## FUEL SYSTEM

### AUXILIARY FUEL TANK

Remove the seat, main fuel tank and side covers.

Remove the regulator/rectifier.


Disconnect the battery negative cable, then the positive cable and remove the battery.

Remove the rear wheel (page 16-3).

Remove rear fenders A and B.

Detach the auxiliary fuel tank hose from the fuel pump. Remove the auxiliary fuel tank mounting bolt and tank.

Install the auxiliary fuel tank in the reverse order of removal.

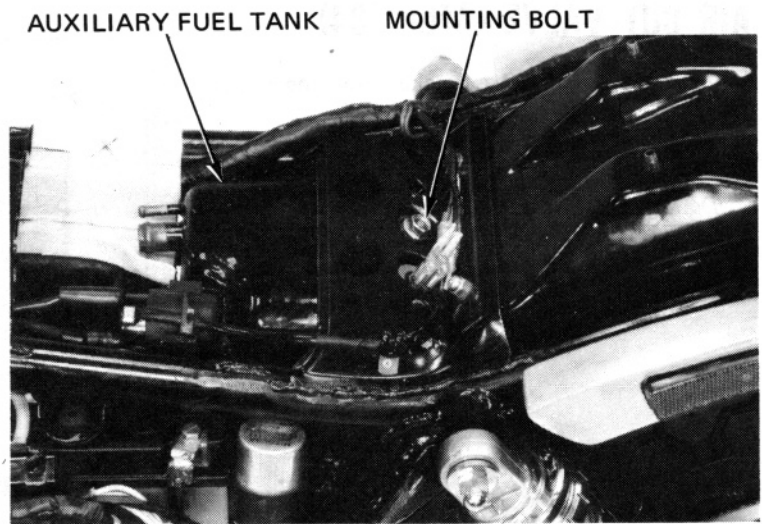

### AIR CLEANER CASE

Check the air cleaner case for deterioration. Replace it if it has any signs of deterioration.

### CRANKCASE VENTILATION SYSTEM

Check that the breather tube is not restricted.

