


ENGINE REMOVAL/INSTALLATION

Remove the radiator (page 6-6).

Remove the right ignition coil.

RIGHT IGNITION COIL

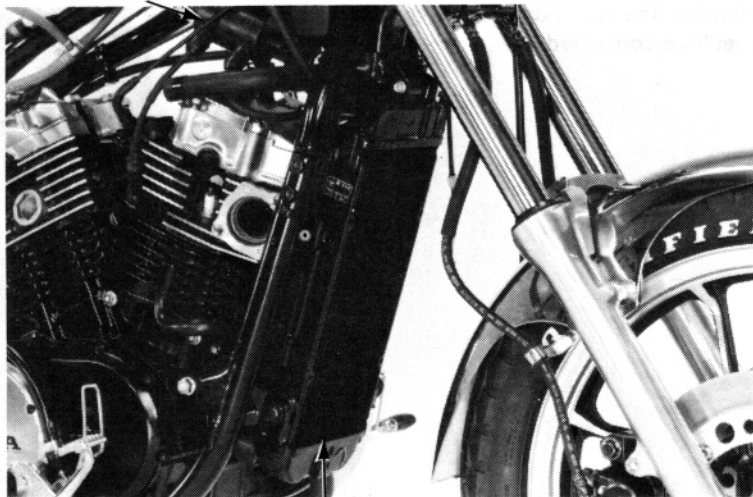


RADIATOR

Remove the left foot peg and gearshift pedal.

Loosen the left exhaust pipe clamp bolts.

Remove the exhaust pipe joint nuts and remove the left exhaust pipe.

JOINT NUTS

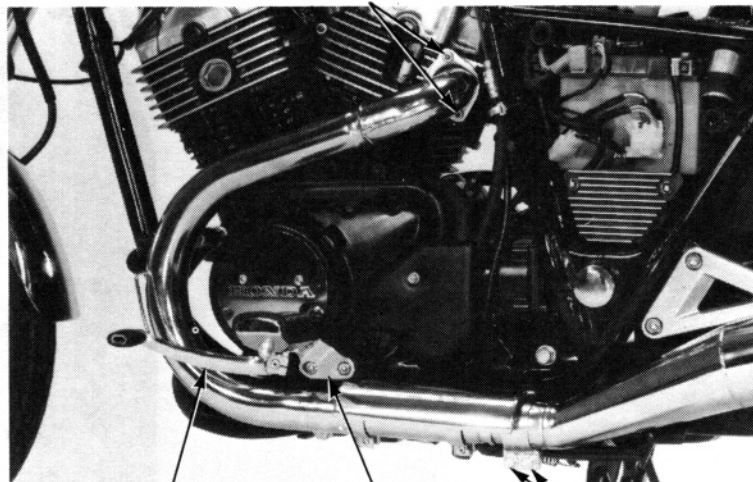


GEARSHIFT PEDAL

LEFT FOOT PEG

CLAMP BOLTS

Remove the bolt attaching the clutch slave cylinder cover and cover.

BOLT

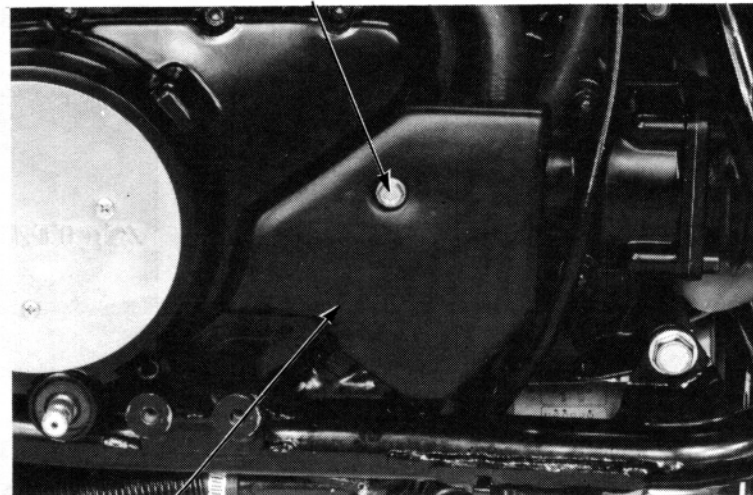

SLAVE CYLINDER COVER