


COOLING SYSTEM

WATER PUMP


MECHANICAL SEAL INSPECTION

Remove the crankcase left rear cover.
Inspect the telltale hole for signs of mechanical seal coolant leakage.
Replace the water pump as an assembly if the mechanical seal is leaking.

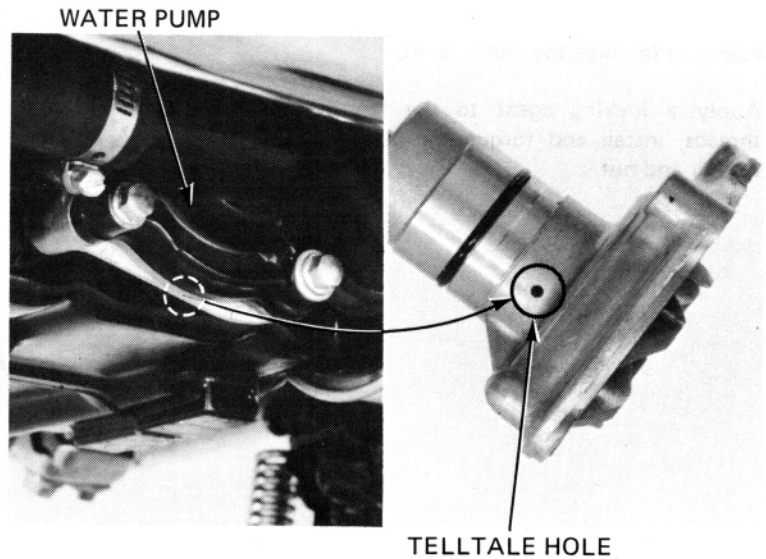

REMOVAL

Remove the engine from the frame (Section 5).
Remove the water pipes and hoses from the engine.

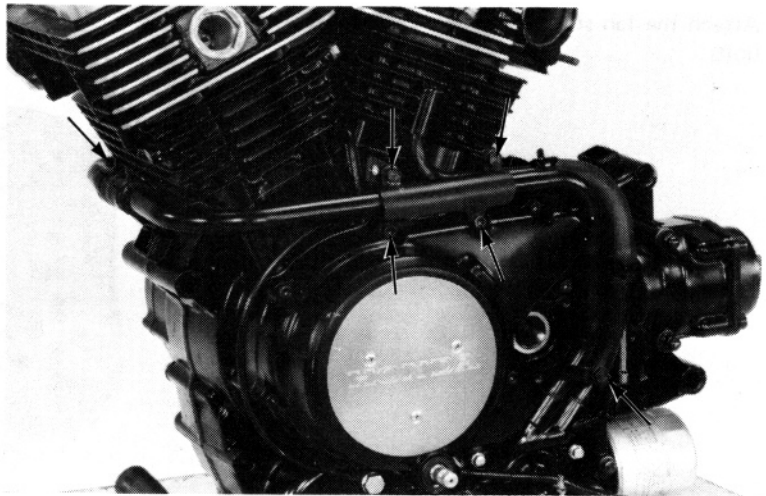

Disconnect the oil pressure switch wire.

Loosen the hose band and disconnect the radiator lower hose from the water pump.

Remove the water pump cover bolts and cover.

