


## COOLING SYSTEM

Apply a coat of engine oil to a new O-ring and install it around the impeller.


Install the two dowel pins.

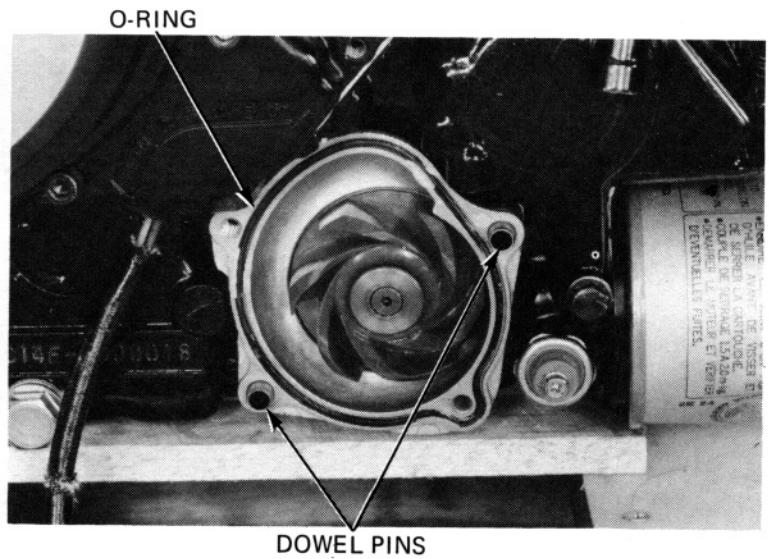

Install the water pump cover.

Connect the radiator lower hose to the water pump cover and tighten the hose band.

Connect the oil pressure switch wire to the switch.

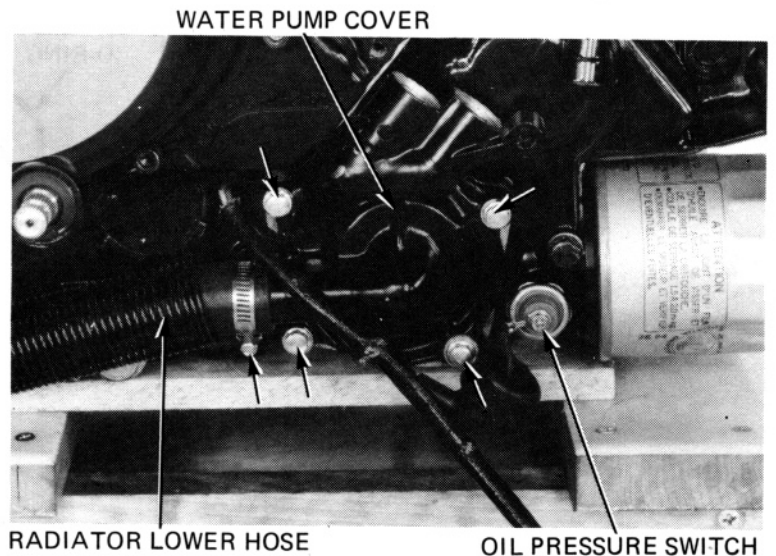

Install the water pipes and hoses with new O-rings and tighten the hose bands.

Install the engine into the frame (page 5-6).

