
TROUBLESHOOTING

Clutch lever soft or spongy

1. Air bubbles in hydraulic system.
2. Low fluid level.
3. Hydraulic system leaking.

Clutch lever too hard

1. Sticking piston(s).
2. Clogged hydraulic system.

Clutch slips

1. Hydraulic system sticking.
2. Discs worn.
3. Spring weak.

Clutch will not disengage

1. Air bubbles in hydraulic system.
2. Low fluid level.
3. Hydraulic system leaking.
4. Hydraulic system sticking.
5. Plates warped.

Motorcycle creeps with clutch disengaged

1. Air bubbles in hydraulic system.
2. Low fluid level.
3. Hydraulic system leaking.
4. Hydraulic system sticking.
5. Plates warped.

Excessive lever pressure

1. Hydraulic system sticking.
2. Lifter mechanism damaged.

Clutch operation feels rough

1. Outer drum slots rough.
2. Sticking piston(s).