

- 1) Squeeze the clutch lever, open the bleed valve 1/2 turn, then close the valve


**NOTE:**

Do not release the clutch lever until the bleed valve has been closed again.

- 2) Release the clutch lever slowly and wait several seconds after it reaches the end of its travel.

Repeat the above steps until bubbles cease to appear in the fluid at the end of the hose.

Fill the fluid reservoir up to between the upper and the lower levels.

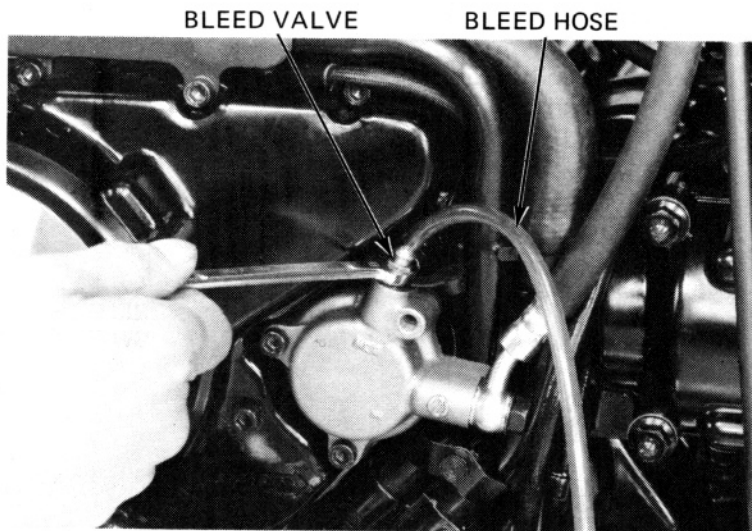

## CLUTCH MASTER CYLINDER

### DISASSEMBLY

Drain clutch fluid from the hydraulic system.

Remove the rear view mirror and clutch lever.

Disconnect the clutch switch wires and remove the clutch hose.

**CAUTION:**



*Avoid spilling clutch fluid on painted surfaces. Place a rag over the fuel tank whenever the clutch system is serviced.*

**NOTE:**

When removing the oil bolt, cover the end of the hose to prevent contamination and secure the hose.

Remove the master cylinder.

Remove the push rod boot and circlip from the master cylinder body.

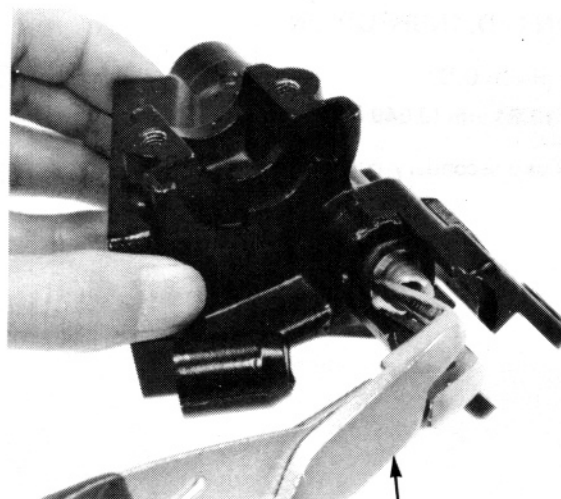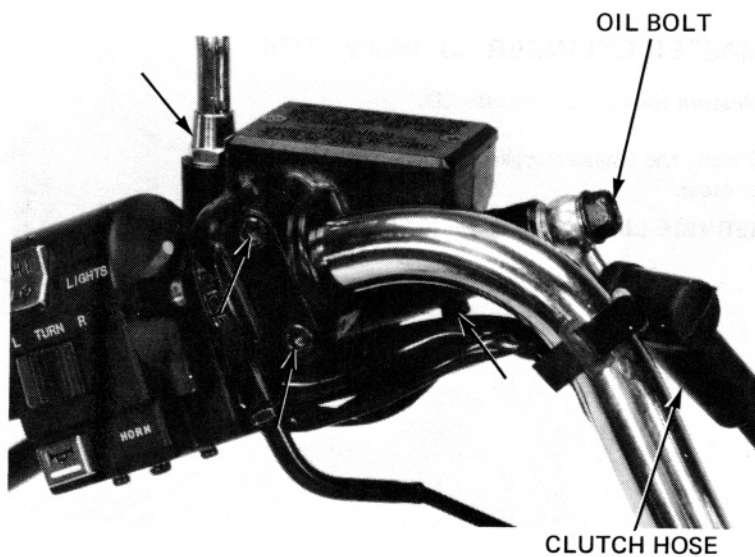

SNAP RING PLIERS  
07914-3230001