


CLUTCH

CLUTCH SLAVE CYLINDER

DISASSEMBLY

Remove the slave cylinder cover.

SLAVE CYLINDER COVER

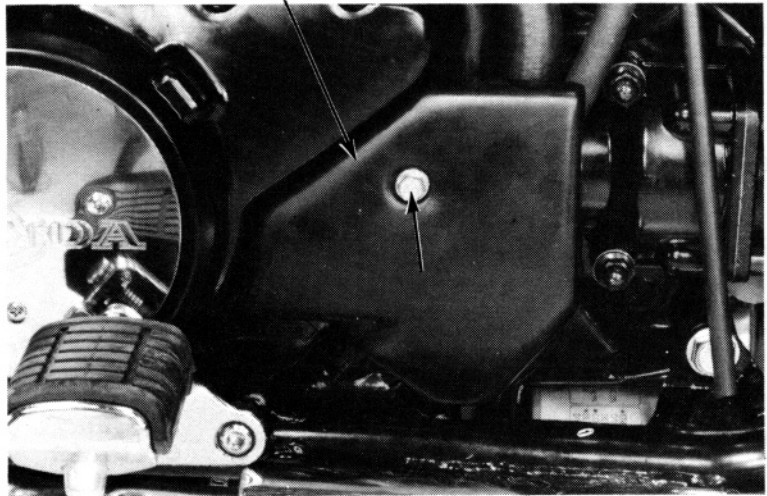

Place a container under the slave cylinder, remove the oil bolt and disconnect the clutch hose.


NOTE:

Avoid spilling clutch fluid on painted surfaces to prevent damage to the paint.

Remove the slave cylinder.

SLAVE CYLINDER

OIL BOLT

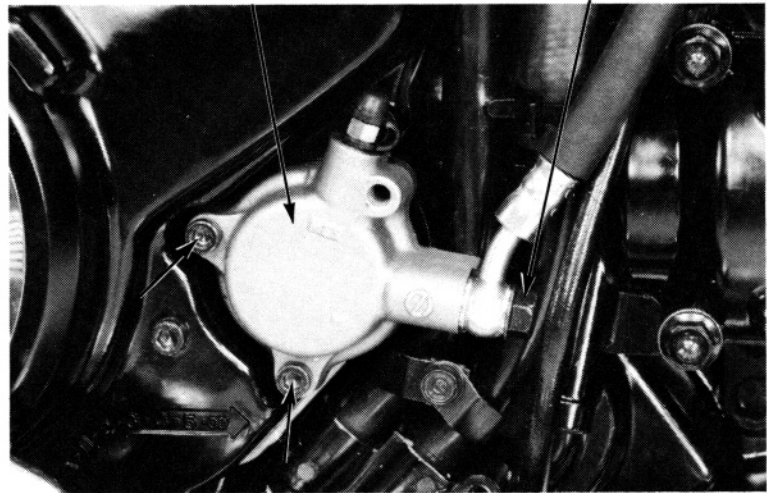

Remove the piston from the cylinder.

If piston removal is hard, place a shop towel over the piston to cushion the piston when it is expelled, and position the cylinder with the piston down.

Apply compressed air to the fluid inlet to remove the piston. Use the air in short spurts.

AIR NOZZLE

