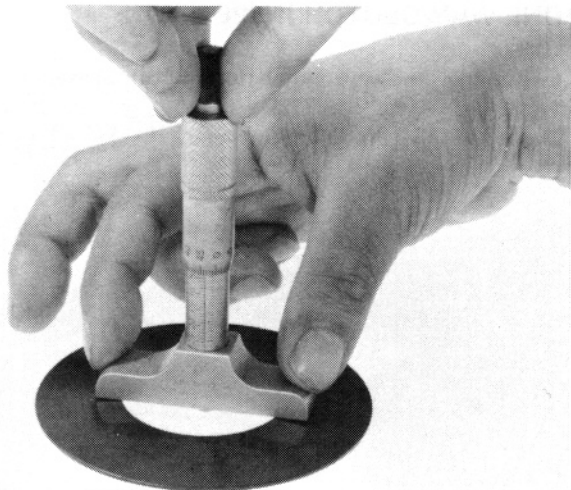


INSPECTION**CLUTCH SPRING**

Measure the height of the clutch spring.

SERVICE LIMIT: 3.6 mm (0.14 in)


Replace the spring if it is shorter than the service limit.

**CLUTCH DISC**

Replace the clutch discs if they show signs of scoring or discoloration. Measure the thickness of each disc.

SERVICE LIMIT: 3.1 mm (0.12 in)

Replace any discs that are thinner than the service limit.

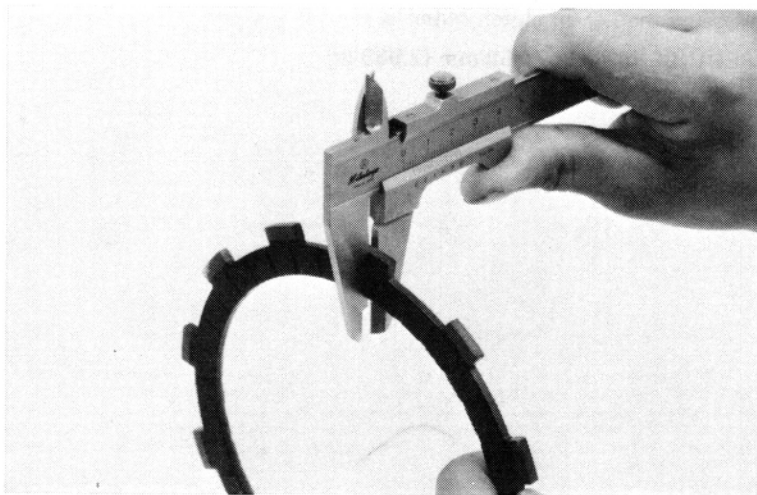**CLUTCH PLATE**

Check for plate warpage on a surface plate, using a feeler gauge.

SERVICE LIMIT: 0.30 mm (0.012 in)

