



CLUTCH

Remove the right crankcase cover, gasket and dowel pins.

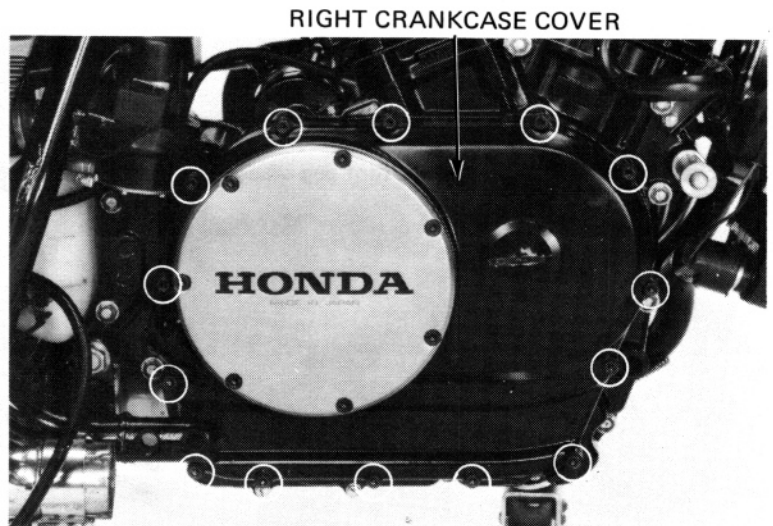

Remove the clutch plates, discs and clutch centers A and B (page 7-11).

Remove the clutch outer and outer gauge.

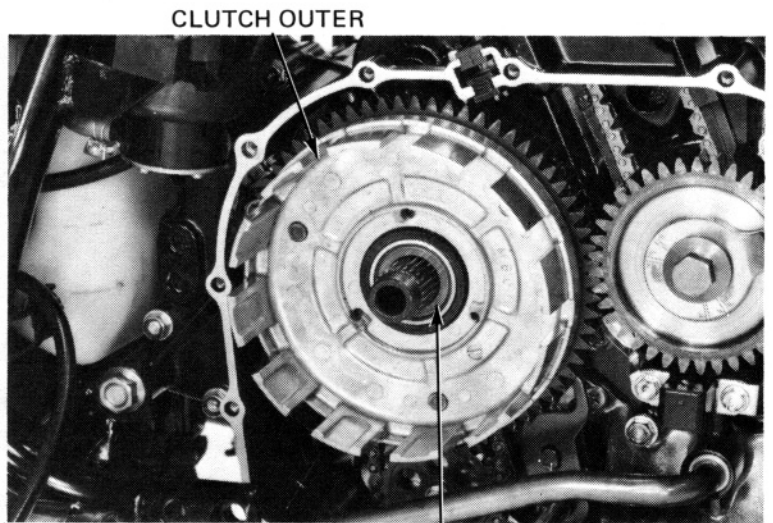

CLUTCH OUTER GUIDE

INSPECTION

CLUTCH OUTER

Check the slots in the clutch outer for nicks, cuts or indentations made by the friction discs.

Check the clutch outer needle bearing for damage or excessive play.

If the needle bearing is difficult to remove from the clutch housing, use the following tools:

Driver: 07749-0010000

Attachment, 37 x 40 mm: 07746-0010200

Pilot, 35 mm: 07746-0040800

