

CLUTCH


Coat the discs and plates with clean engine oil.
Install the clutch discs and plates as shown.

NOTE:


The No. 2 and No. 3 clutch discs from the inside have different grooves.

CAUTION:

*Do not pull clutch center B out after installing the discs and plates or plate will fall between clutch centers A and B.
This will cause the clutch to not this engage.*

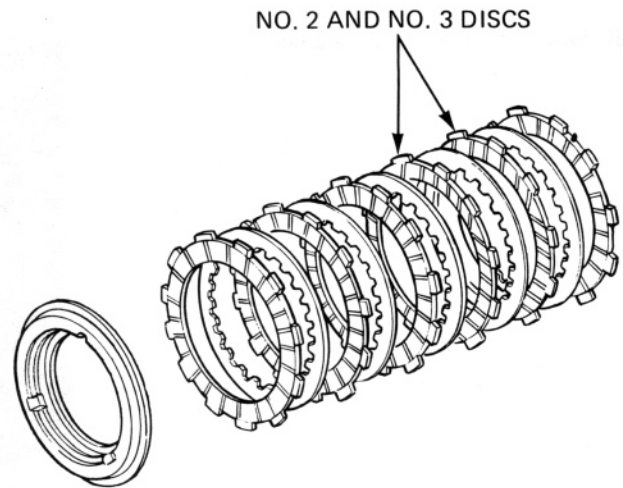

Install the clutch pressure plate.

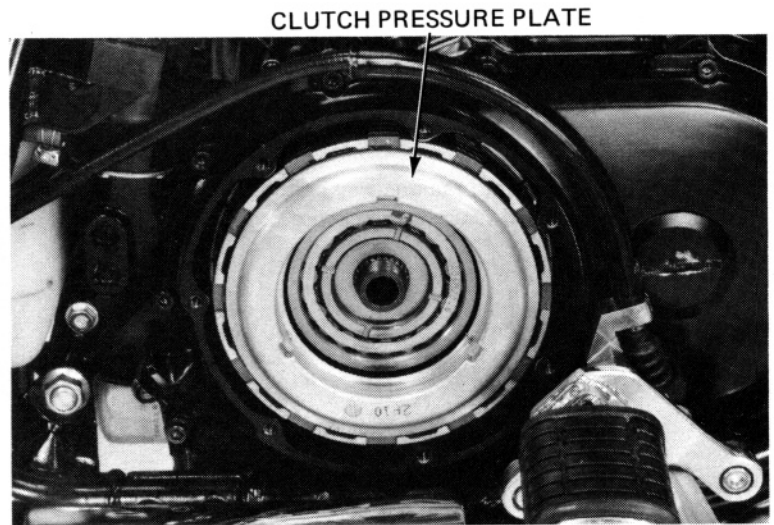

Install the clutch spring set plate, clutch spring, and washers.

NOTE:

Install the clutch spring with the dished face towards the inside.

