


Install the lock washer with its dished face towards the inside.

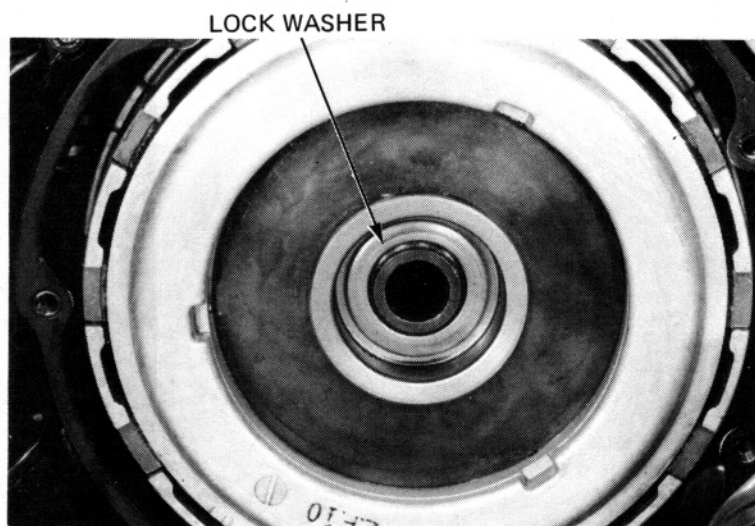

Place the transmission in 6th gear.


Apply the rear brake and tighten the lock nut.

NOTE:

When servicing the clutch with the engine out of the frame, shift the transmission into gear and hold the output shaft with the HOLDER 07923-6890101.

TORQUE:


45-55 N·m (4.5-5.5 kg-m, 33-40 ft-lb)

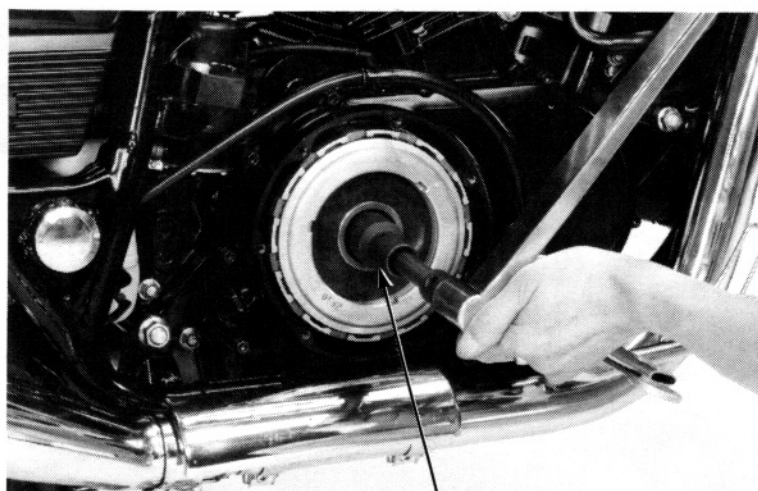

LOCK NUT WRENCH 17 x 27 mm
COMMERCIALY AVAILABLE
IN U.S.A.

Install the clutch lifter rod.

Install the clutch lifter plate, lifter guide and bearing.

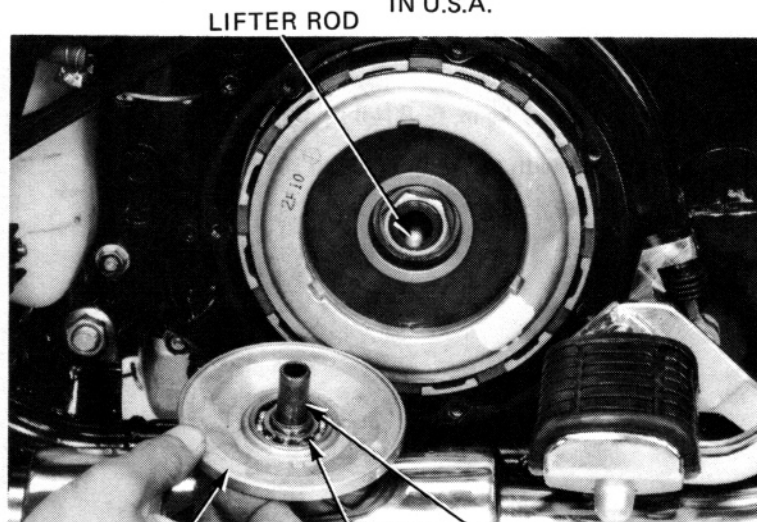

LIFTER PLATE BEARING LIFTER GUIDE