



CLUTCH

Install the snap ring.

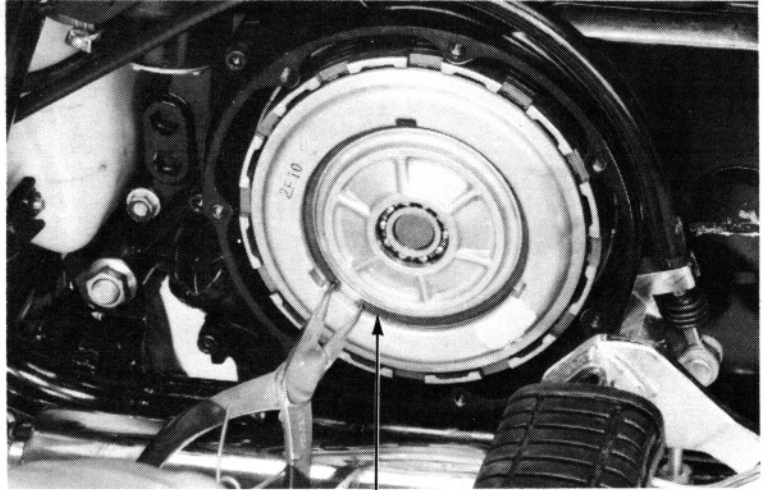

SNAP RING

Install a new gasket onto the clutch cover.

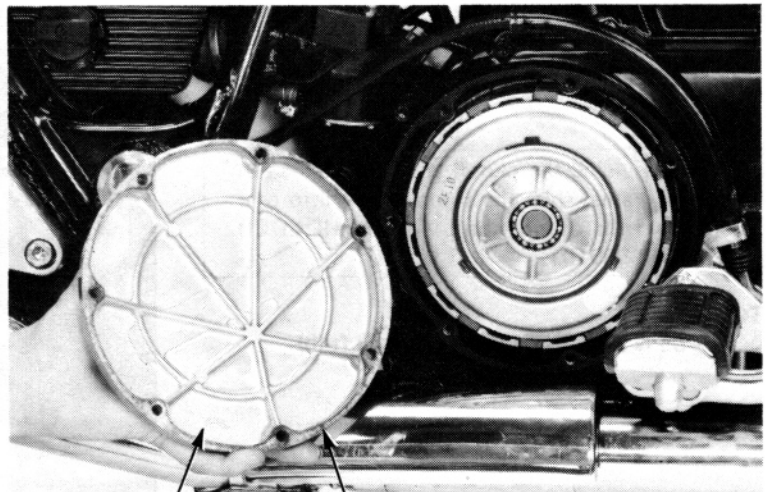


CLUTCH COVER GASKET

Install the clutch cover and tighten the cover bolts.

TORQUE:

8–12 N·m (0.8–1.2 kg-m, 6–9 ft-lb)

Fill the crankcase with the recommended oil (page 2-3).

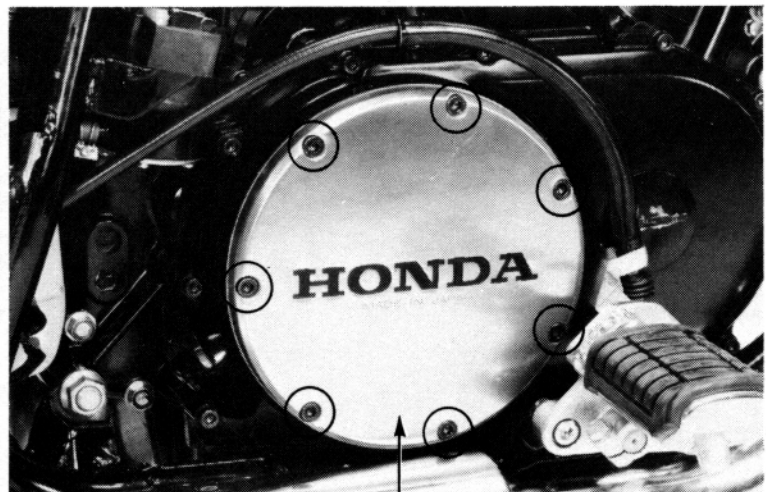

CLUTCH COVER