

ALTERNATOR/STARTER CLUTCH

STARTER CLUTCH DISASSEMBLY



Remove the flywheel (page 8-3).

Remove the starter drive and reduction gears, and gear shafts.

Pull the starter driven gear toward you until it stops. Then remove the needle bearing from the gear.

Remove the driven gear.

Remove the six torx bolts attaching the starter clutch to the flywheel and remove the starter clutch and clutch outer.

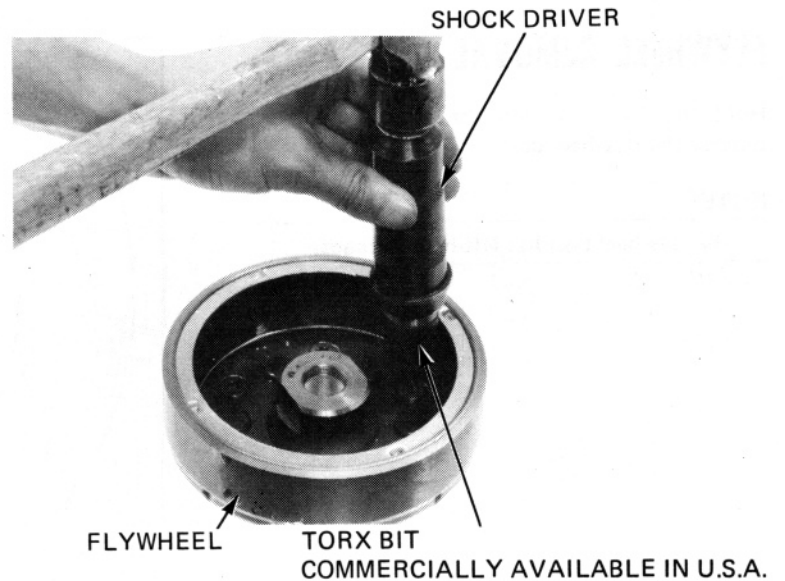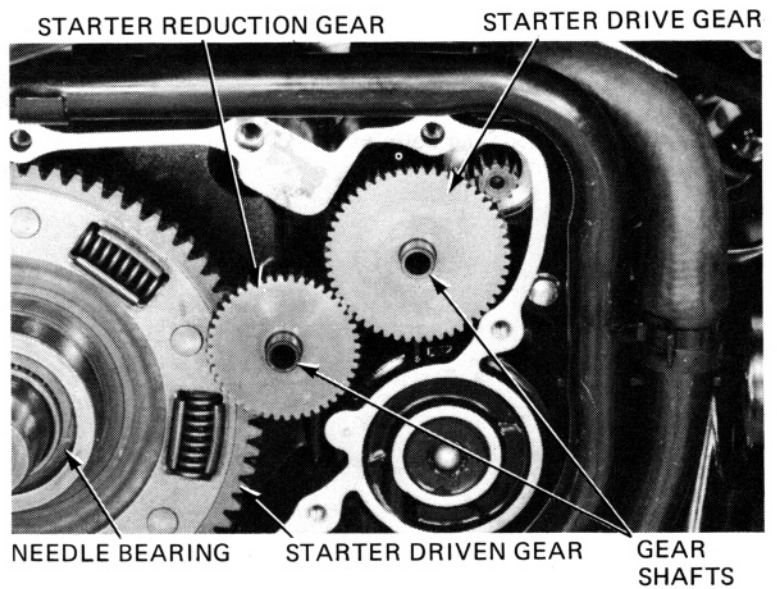

STARTER CLUTCH INSPECTION

Inspect the starter clutch for smooth operation.

Check the rollers for excessive wear.

