


GEARSHIFT LINKAGE

GEARSHIFT LINKAGE REMOVAL

Remove the right crankcase cover and clutch assembly (section 7).


Remove the oil pipe.

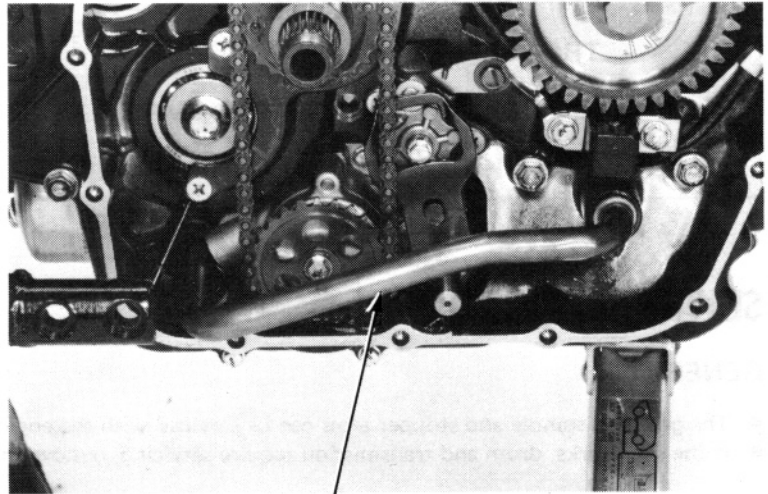

OIL PIPE

Remove the oil pump driven sprocket bolt.

Remove the oil pump drive chain, drive and driven sprockets.

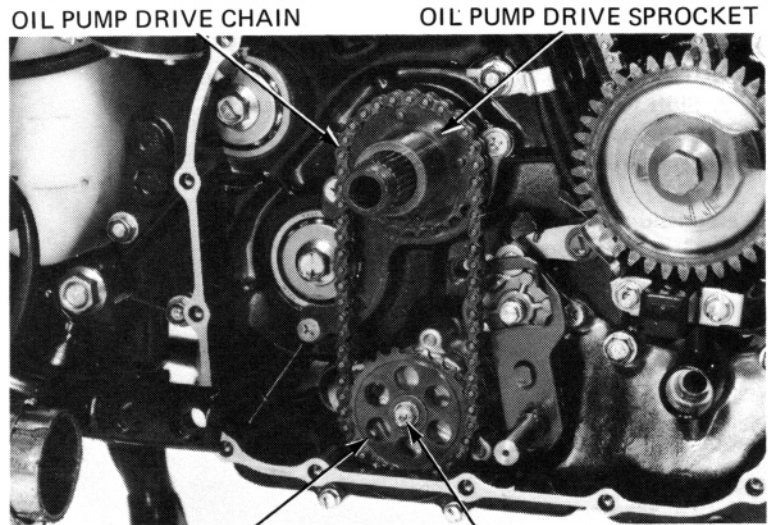


OIL PUMP DRIVE CHAIN

OIL PUMP DRIVE SPROCKET

OIL PUMP DRIVEN SPROCKET BOLT

Remove the snap ring, spring and gearshift spindle plate.

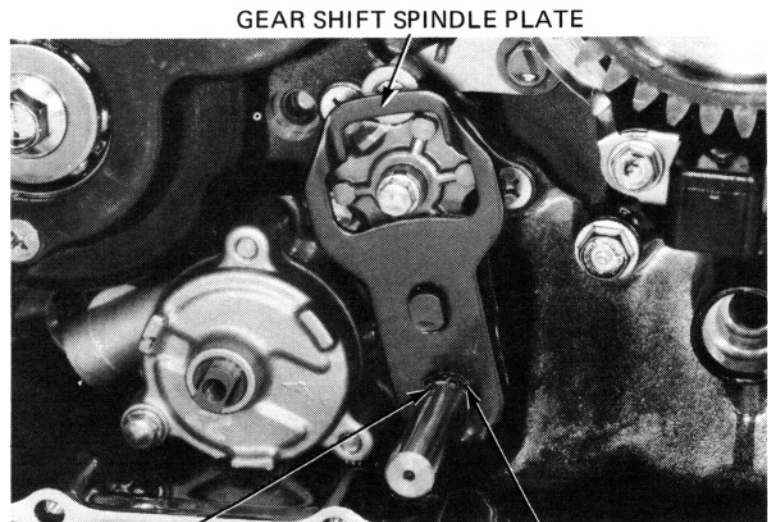

GEAR SHIFT SPINDLE PLATE

SNAP RING

SPRING