


CYLINDER HEAD/VALVE

CAMSHAFT RUNOUT

Check camshaft runout with a dial indicator. Support both ends of the camshaft with V-blocks. Use 1/2 of the total indicator reading to determine runout.

SERVICE LIMIT: 0.05 mm (0.002 in)

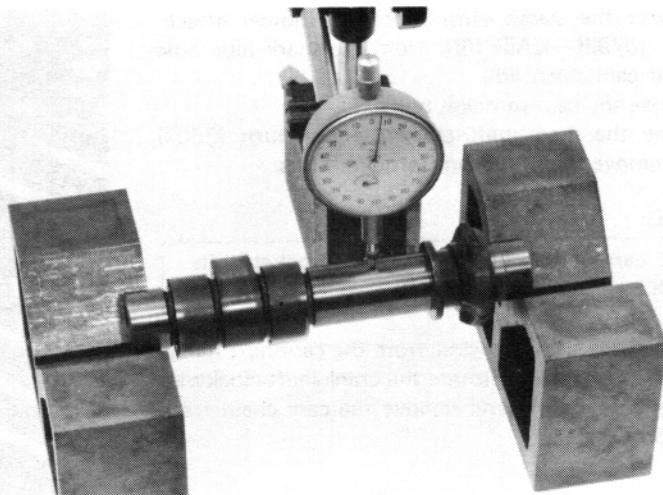

CAM LOBE HEIGHT

Using a micrometer, measure the height of each cam lobe.

SERVICE LIMITS: IN/EX: 36.38 mm (1.4282 in)



Wipe any oil from the journals. Lay a strip of plastigauge lengthwise on top of each camshaft journal.


NOTE:

Avoid placing plastigauge over the oil hole in the cam holder.

Hook the cam chain suspension wire against the cam chain guide.

NOTE:

Do not hook the wire against the head cover mating surface.

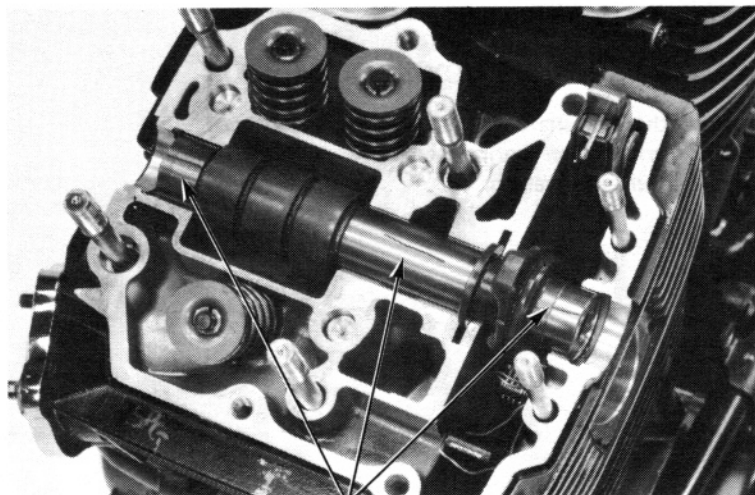

PLASTIGAUGE