



CYLINDER HEAD/VALVE

Remove the assist springs/caps and shafts.

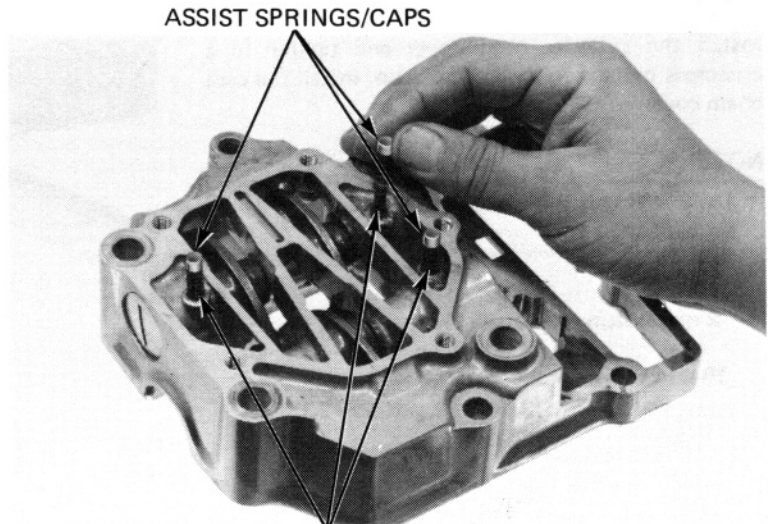

ASSIST SHAFTS
IN. ROCKER ARM SHAFT PLUG
(CAM CHAIN SIDE)

With a flat screwdriver, remove the plugs from the rocker arm shaft hole;
Thread 6 mm bolts into the plugs on the cam chain side. Then pull on the bolts with pliers to remove the plugs.

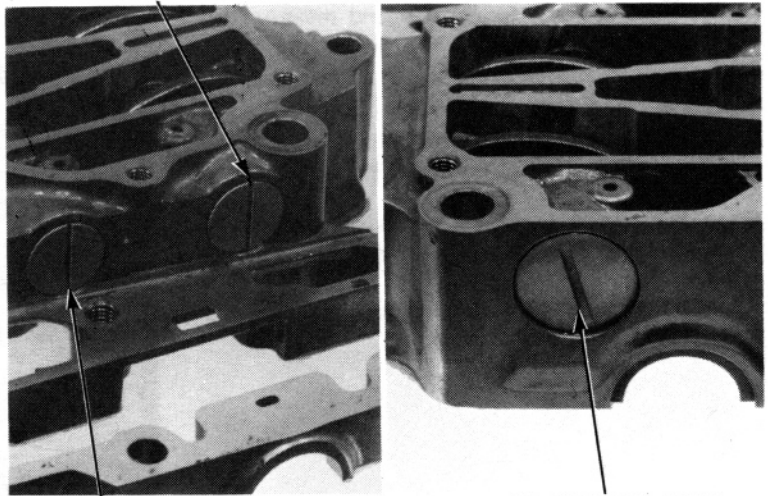

EX. ROCKER ARM

IN. ROCKER ARM

Remove the rocker arm shafts and rocker arms.

