



Remove the right crankcase 8 mm and 6 mm bolts.

NOTE:

To prevent a distorted crankcase, loosen the bolts in a crisscross pattern in 2-3 steps.

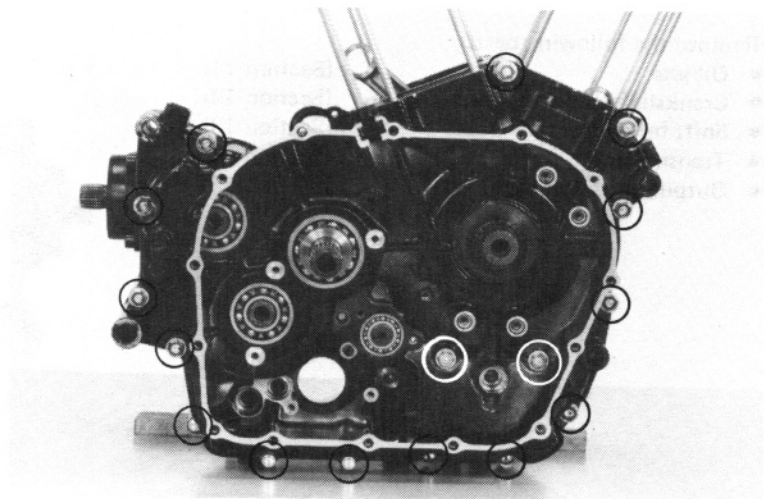

Remove the left crankcase 8 mm and 6 mm bolts.

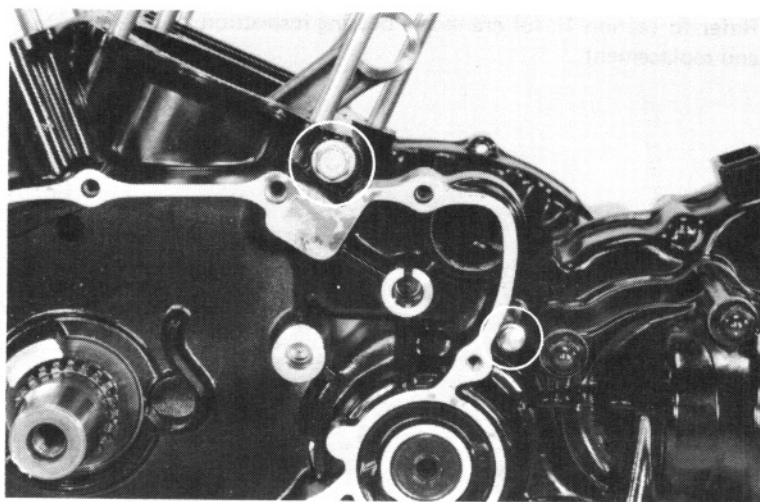

Remove the 8 mm socket head bolt.

