


CRANKSHAFT/CONNECTING ROD

CRANKSHAFT REMOVAL

Separate the crankcase (page 12-2) and remove the dowel pins.
Remove the crankshaft.

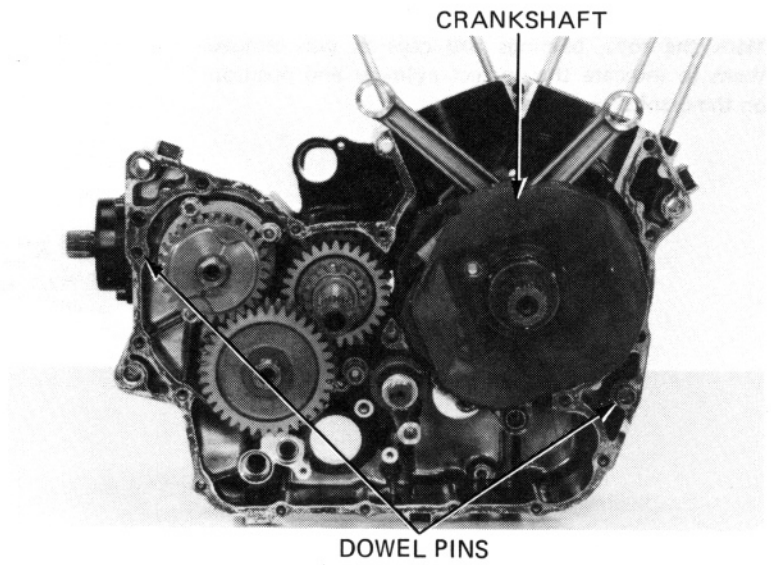

CONNECTING ROD REMOVAL

Check the connecting rod side clearance.
SERVICE LIMIT: 0.40 mm (0.0157 in)



Remove the connecting rod bearing caps and note their locations.

NOTE:

Tap the side of the cap lightly if it is hard to remove.

