


## DRIVE TRAIN

---

### ASSEMBLY

Place a new oil seal over the drive shaft.

Install the damper spring and new stop ring.

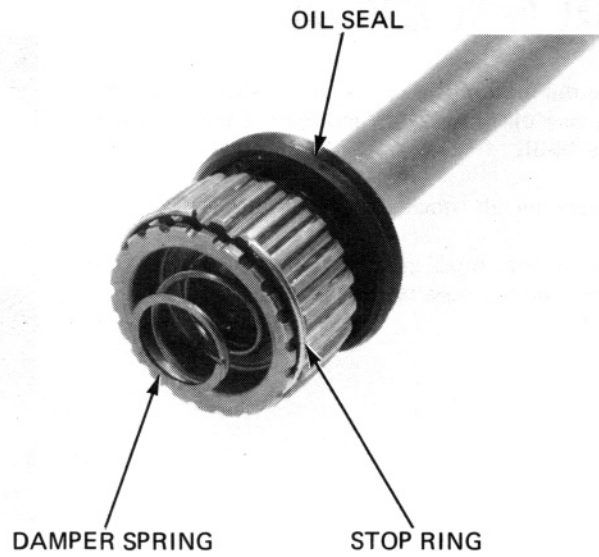


### UNIVERSAL JOINT

#### REMOVAL/INSTALLATION

Remove the swingarm (page 16-13).

Remove the universal joint from the engine output shaft.

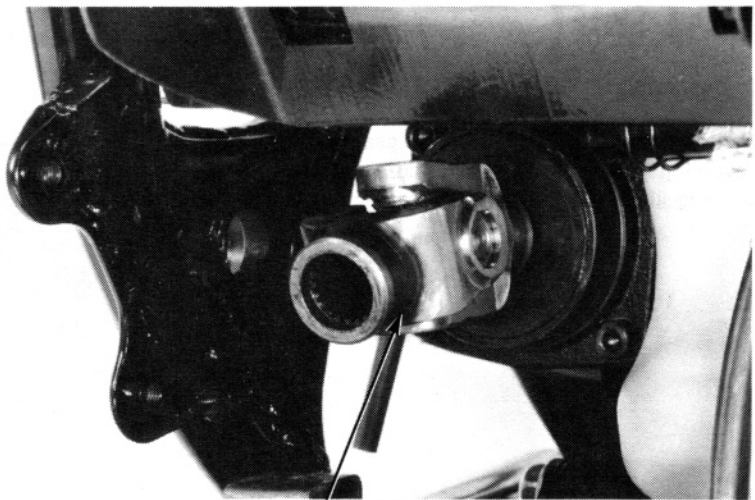

UNIVERSAL JOINT

Inspect the universal joint bearings for excessive play or damage.

Apply grease to the splines and install the universal joint.

