


DRIVE TRAIN

PINION BEARING REMOVAL


Remove the O-ring from the pinion shaft.

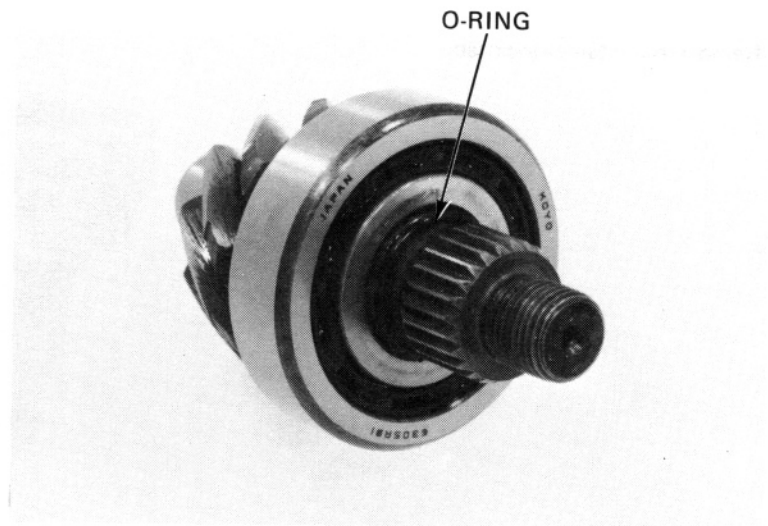

Pull the bearing outer and inner races off the shaft with the bearing puller.

Pull the other inner race off with the same tool.

Remove the pinion adjustment spacer.

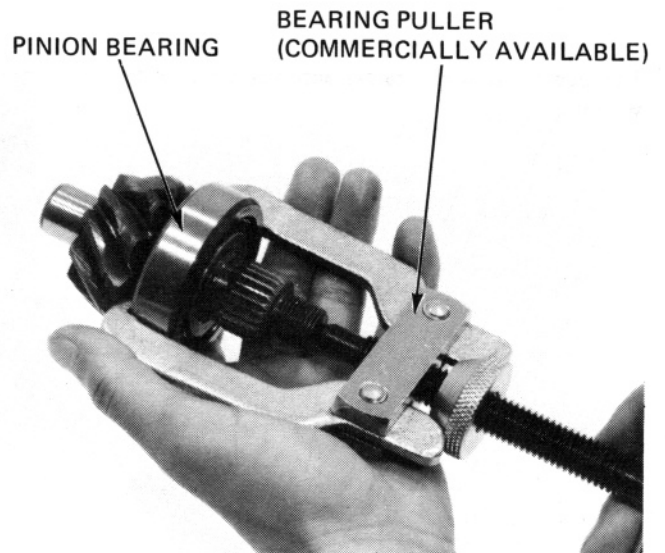

PINION RETAINER OIL SEAL REPLACEMENT

Remove the O-ring and oil seal from the pinion retainer.

Drive a new oil seal into the retainer.

Coat a new O-ring with oil and install it onto the retainer.

To install new oil seal, use driver 07945-3330300.

