


HEADLIGHT

REMOVAL

Remove the two headlight mounting screws.

Disconnect the wire coupler and remove the headlight.

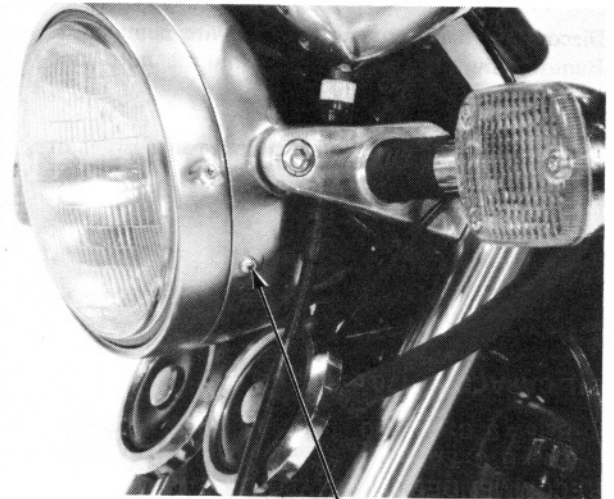


HEADLIGHT MOUNTING SCREW

CASE REMOVAL/INSTALLATION

Disconnect the wire connectors in the headlight case.

Remove the headlight case mounts and headlight case.

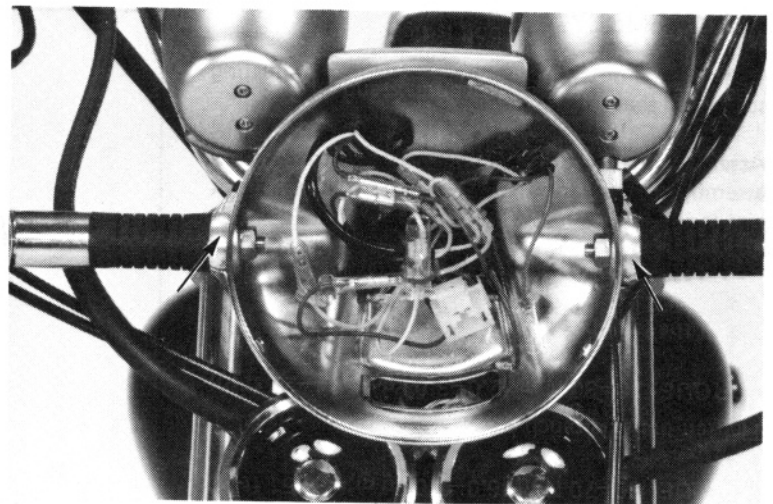

Install the headlight case in the reverse order of removal.

Align the index mark on the headlight case with index mark on the headlight bracket.

