


FRONT WHEEL/SUSPENSION

BRACKET REMOVAL/INSTALLATION

Disconnect the front turn signal wire connectors. Remove the headlight bracket mount bolts and bracket/turn signal assemblies.

Install the headlight bracket in the reverse order of removal.

HEADLIGHT BRACKET

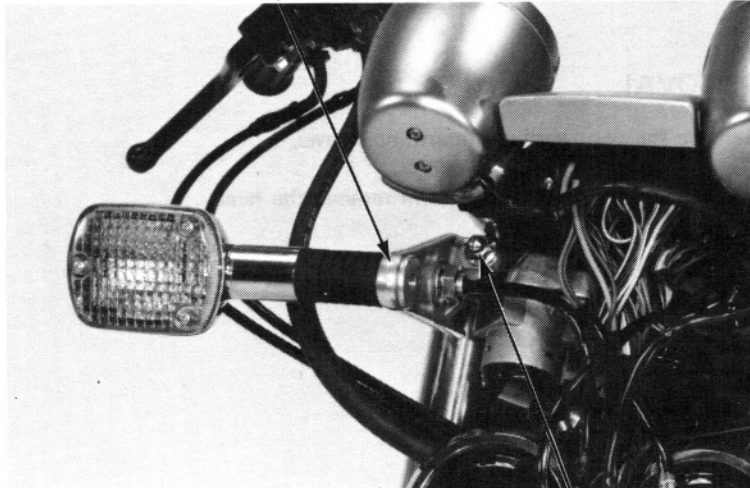


BOLT

DISASSEMBLY/ASSEMBLY

Remove the retaining screws, horizontal adjusting screw and sealed beam unit from the rim.

Assemble the headlight in the reverse order of disassembly. After installation, adjust the headlight aim (page 3-16).

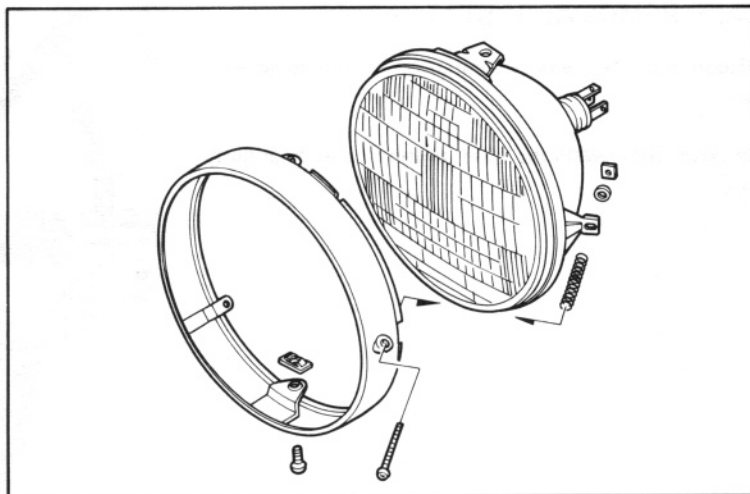

IGNITION SWITCH

REMOVAL/INSTALLATION

Remove the headlight and headlight case.

Remove the bolt attaching the right horn and horn.


Remove the ignition switch rubber cover.

Remove the instrument lower cover and disconnect the ignition switch wire couplers.

Remove the ignition switch mounting bolts, and ignition switch.

Install the ignition switch in the reverse order of removal.

RUBBER COVER

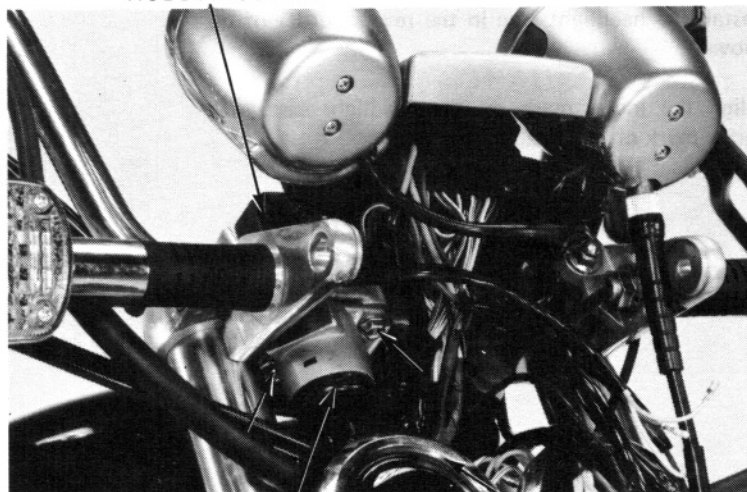

IGNITION SWITCH RIGHT HORN