



DISASSEMBLY/ASSEMBLY

Open the wire clamp.

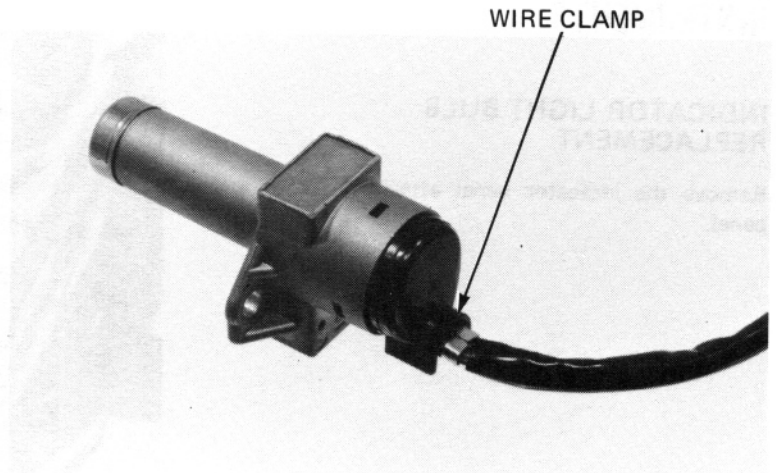

Insert the ignition key and turn it to between the ON and OFF detent positions.

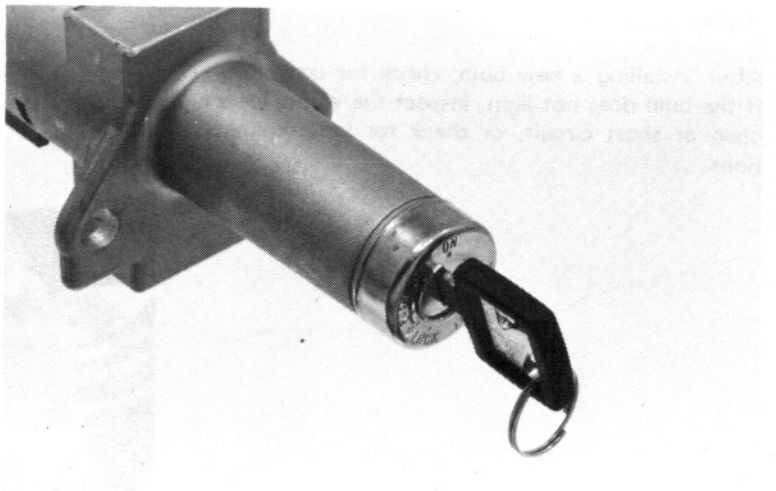

Push in the lugs in the slots and pull the contact base from the switch.

Assemble the ignition switch in the reverse order of disassembly.

