


INSTRUMENTS


INDICATOR LIGHT BULB REPLACEMENT

Remove the indicator panel attaching screws and panel.

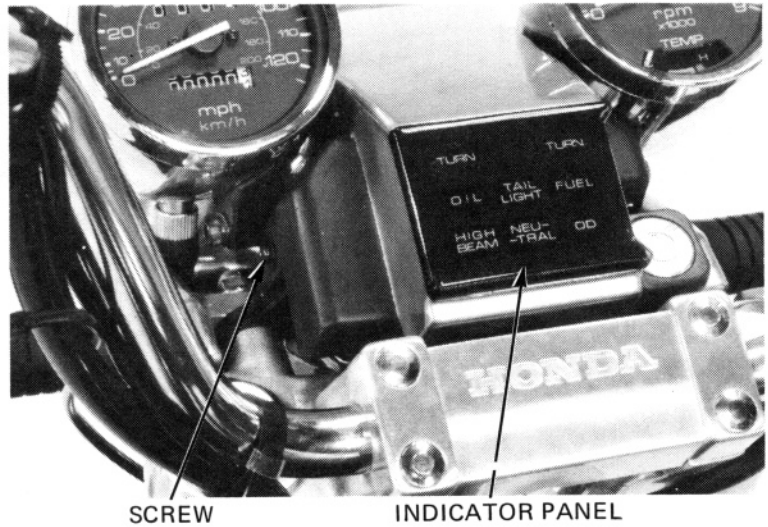

Replace the bulb.

After installing a new bulb, check for continuity. If the bulb does not light, inspect the wiring for an open or short circuit, or check for loose connections.

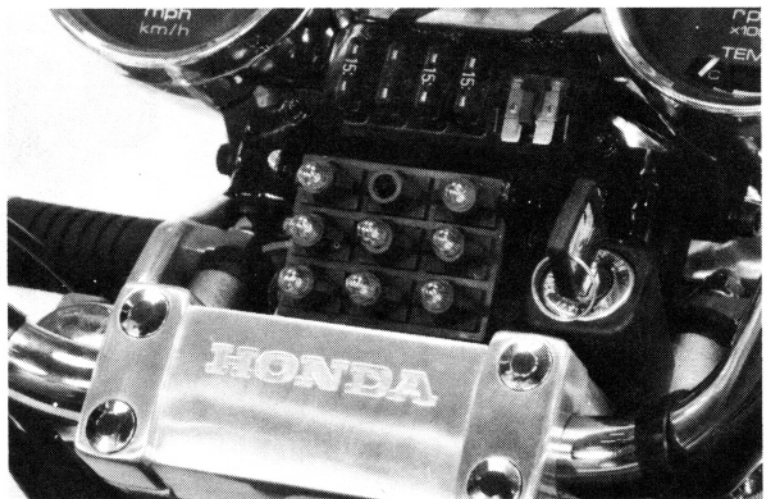

REMOVAL

Remove the headlight and case (page 15-3). Disconnect the speedometer cable from the instruments.

Remove the two screws attaching the instrument lower cover and cover.

Disconnect all wire couplers from the fuse holder.

Remove the headlight brackets (page 15-4) and instruments.

