



FRONT WHEEL/SUSPENSION

DISASSEMBLY

Remove the brake disc mounting bolts, and discs.

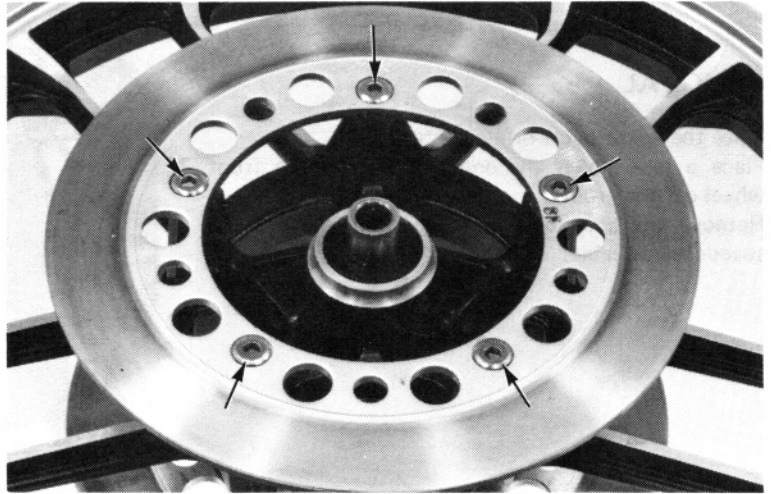

Remove the side collar and right seal.

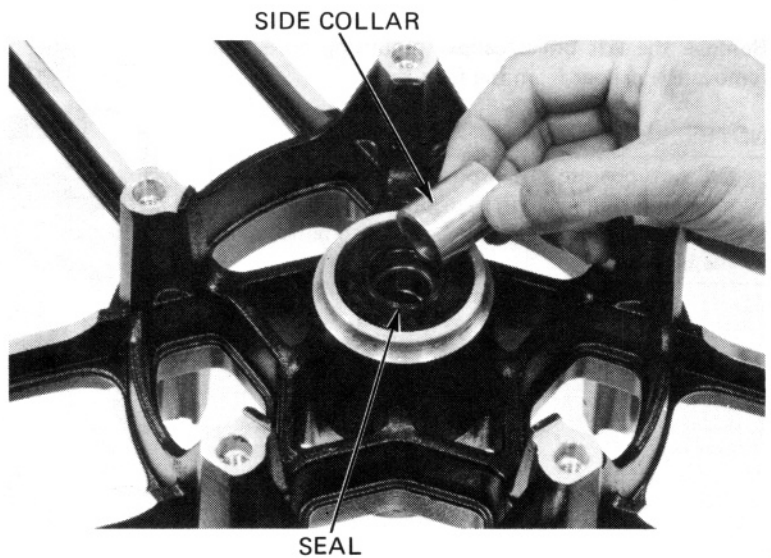

Remove the left seal and speedometer gear retainer.

