

DISASSEMBLY

Depress the air valve and release front fork air pressure.

CAUTION:

- *If air pressure is not released before disassembling, the fork tube cap may become a projectile.*
- *The cap is also under spring pressure. Use care when removing and wear eye and face protection.*



Hold the fork tube in a vise, with soft jaws or a shop towel and remove the fork tube cap.

CAUTION:

- *Be careful not to damage the fork tube's sliding surface.*

Remove the fork spring, spacer and washer.

Pour out the fork fluid by pumping the fork up and down several times.

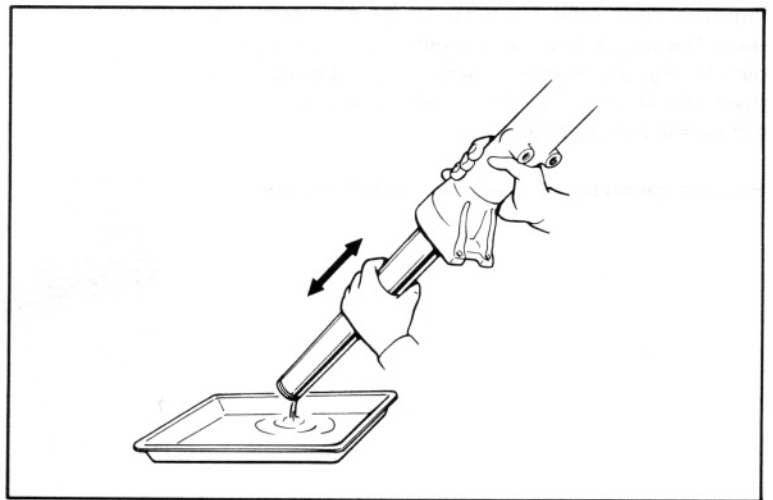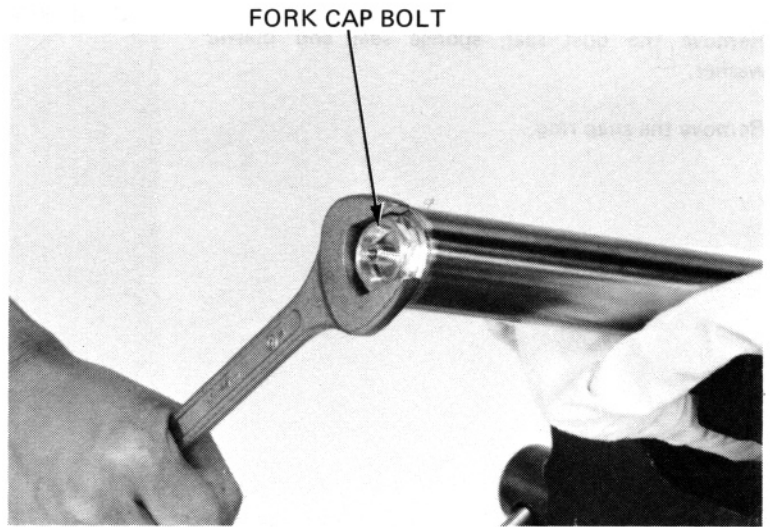

HEX WRENCH, 6 mm 07917-3230000
OR COMMERCIALY AVAILABLE

Hold the fork slider in a vise with soft jaws or a shop towel.

Remove the socket bolt with a hex wrench.

NOTE:

- *Temporarily install the spring and fork bolt if difficulty is encountered in removing the bolt.*

The piston and rebound spring can be removed from the right fork.

