


FRONT WHEEL/SUSPENSION

Pour the specified amount of ATF into the fork tube.


CAPACITY: 467.5–472.5 cc (15.82–15.99 ozs)

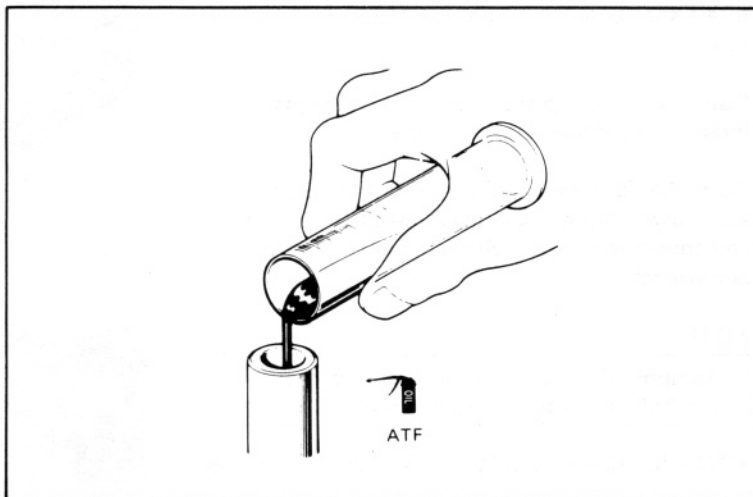

Install the fork spring, spring seat and spacer into the fork tube.

NOTE:

Note the spring direction, the narrow pitches should face toward the top.

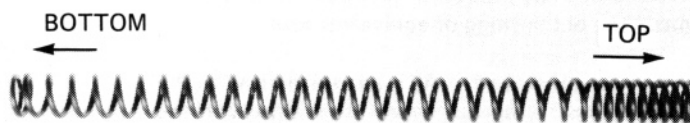

Install and torque the fork tube cap.

TORQUE: 15–30 N·m (1.5–3.0 kg·m, 11–22 ft·lb)

