


BOTTOM CONE RACE REPLACEMENT

Inspect the bottom cone race for wear or damage and replace if necessary.

Remove the bottom cone race with a hammer and a drift.

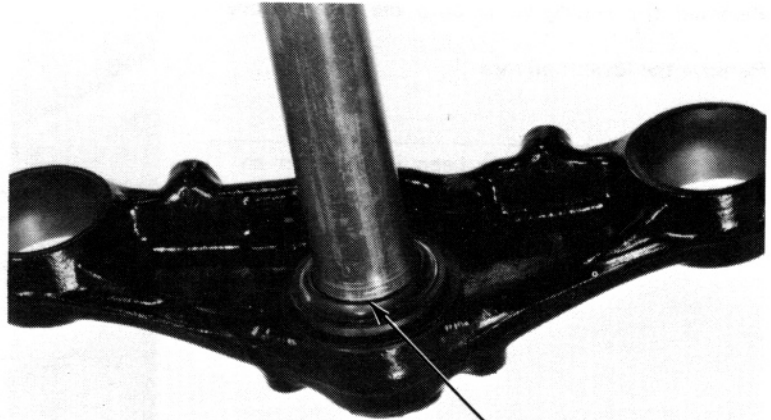


BOTTOM CONE RACE

Install a new washer and dust seal and drive a new bottom cone race into place.

STEERING STEM DRIVER

07946-MB00000 OR 07946-3710100 AND 07964-MB00200

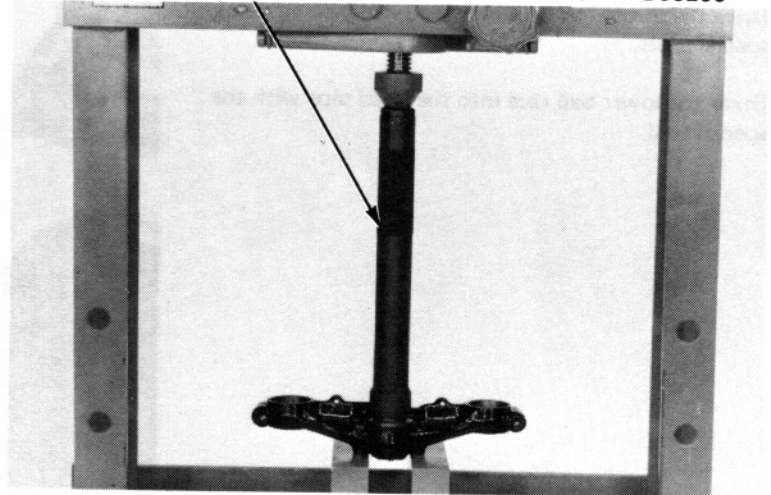

BALL RACE REPLACEMENT

Inspect the top and bottom ball races and replace if worn or damaged.

Remove the upper ball race with the special tool.

NOTE:

Remove the sliding guide from the bearing race remover.

BEARING RACE REMOVER/
INSTALLER 07946-3710400

