


FRONT WHEEL/SUSPENSION

Install the bearing adjustment nut and tighten it snug against the top cone race. Then, back it off 1/8 turn.

Make sure that there is no vertical movement and that the stem rotates freely.

PIN SPANNER
07702-0010000

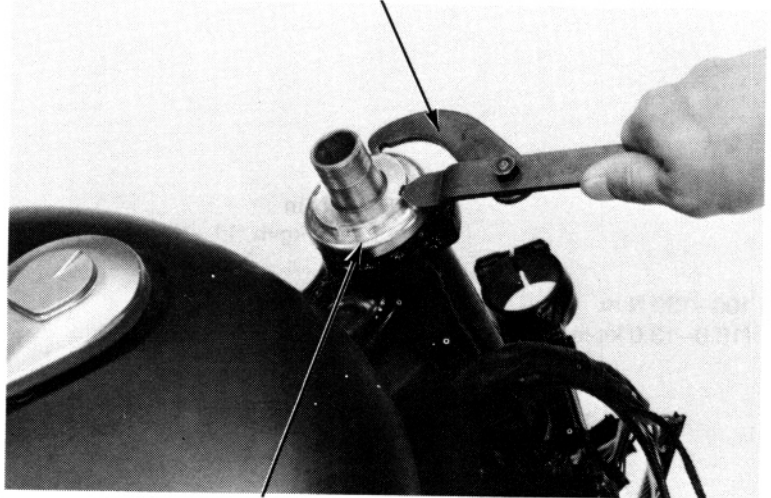

BEARING ADJUSTMENT NUT
LOCK NUT WRENCH, 30 x 32 mm
COMMERCIALY AVAILABLE IN U.S.A.


Install the fork top bridge and stem nut.

Temporarily install the front forks and tighten the stem nut.

TORQUE:

80–120 N·m (8.0–12.0 kg·m, 58–87 ft·lb)

Install the removed parts in the reverse order of removal.

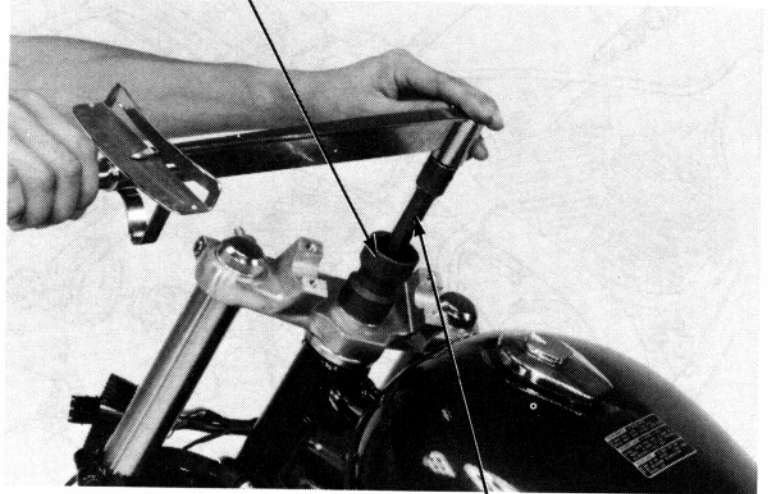

EXTENSION BAR
COMMERCIALY AVAILABLE IN U.S.A.