

TROUBLESHOOTING

Oscillation

1. Bent rim.
2. Loose wheel bearings.
3. Faulty tire.
4. Loose axle.
5. Tire pressure incorrect.
6. Swingarm bearings worn.
7. Worn tires.

Soft suspension

- Weak spring(s).

Hard suspension

- Bent shock absorber.

Suspension noise

1. Shock case binding.
2. Loose fasteners.