

REAR WHEEL/SUSPENSION/BRAKE

Tighten the axle pinch bolt.


TORQUE: 20–30 N·m (2.0–3.0 kg·m, 14–22 ft·lb)

Place the brake rod through the brake arm pin and install the brake adjusting nut.

Tighten the brake torque link bolt.

TORQUE: 15–25 N·m (1.5–2.5 kg·m, 11–18 ft·lb)

Adjust the rear brake (page 3-18).

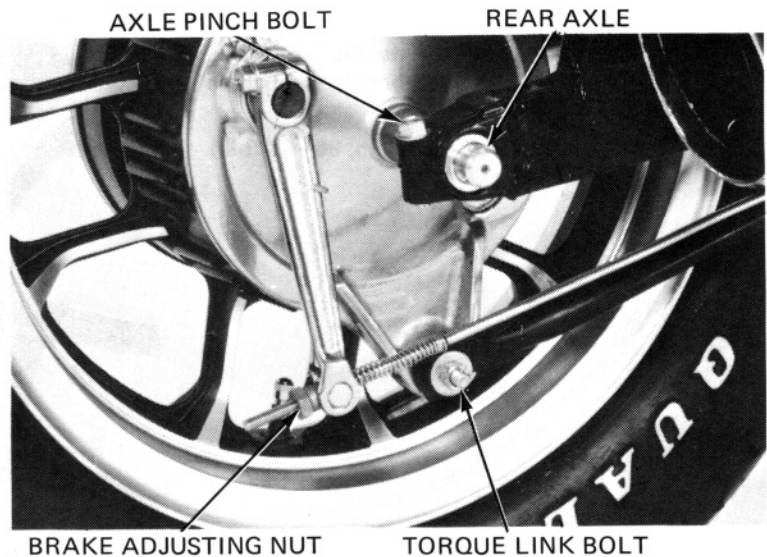


REAR BRAKE PANEL

LINING THICKNESS INSPECTION

Measure the rear brake lining thickness.

SERVICE LIMIT: 2.0 mm (0.08 in)

Replace the brake shoes if thinner than the service limit.

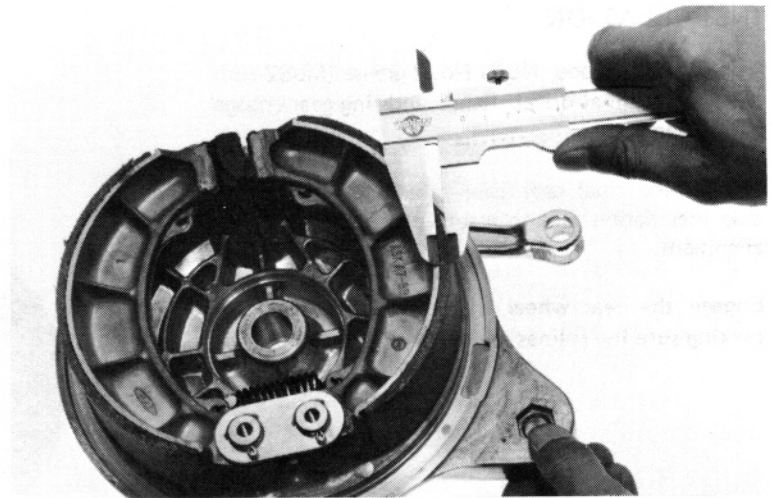

DISASSEMBLY

Remove the rear brake arm.

Remove the cotter pins and brake shoes.

ASSEMBLY

Apply grease to the anchor pins and brake cam.

WARNING

Contaminated brake linings reduce stopping power. Keep grease off the brake linings. Wipe any excess grease off the cam.

- Install the following.
- brake shoes.
- cotter pins.

