



DISC THICKNESS

Measure the thickness of each disc.
SERVICE LIMIT: 4.0 mm (0.16 in)

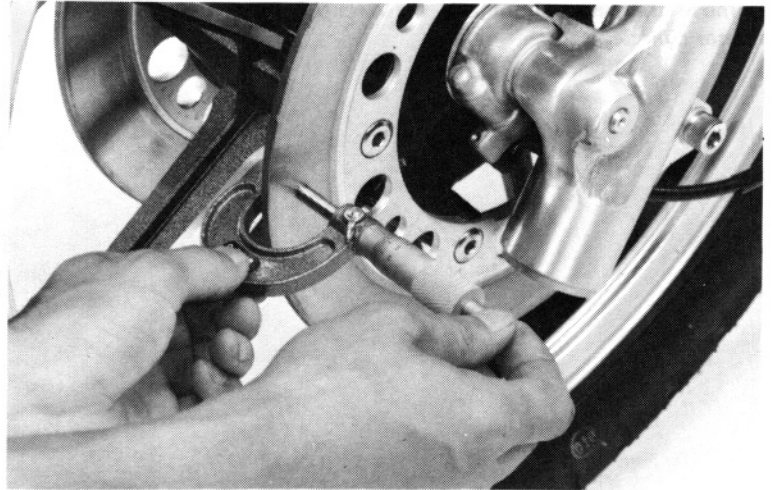

BRAKE DISC WARPAGE

Measure the brake disc for warpage with a feeler gauge on a surface plate.
SERVICE LIMIT: 0.30 mm (0.012 in)

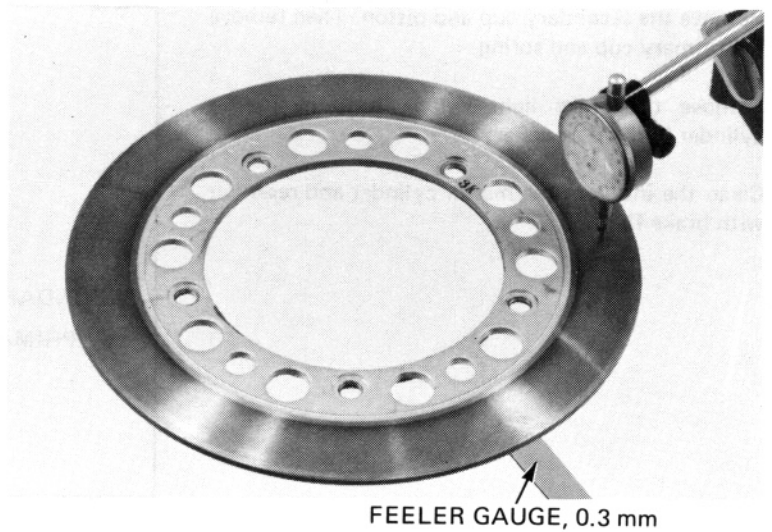

MASTER CYLINDER

DISASSEMBLY

Drain brake fluid from the hydraulic system.

Remove the brake lever and rear view mirror from the master cylinder. Disconnect the brake hose.

CAUTION:

Avoid spilling brake fluid on painted surfaces. Place a rag over the fuel tank whenever the brake system is serviced.

NOTE:

When removing the oil hose bolt, cover the end of the hose to prevent contamination. Secure the hose to prevent fluid from leaking out.

Remove the master cylinder.

