

ELECTRIC STARTER

STARTER MOTOR

REMOVAL

WARNING

With the ignition switch OFF, remove the negative cable at the battery before servicing the starter motor.

Remove the alternator cover, flywheel and starter drive gear (section 8).

Disconnect the starter motor cable at the motor. Remove the starter motor mounting bolts, and starter motor.

