

## ELECTRIC STARTER

---

NORMAL DIRECTION: CONTINUITY  
REVERSE DIRECTION: NO CONTINUITY

### INSPECTION

Check for continuity with an ohmmeter.

