
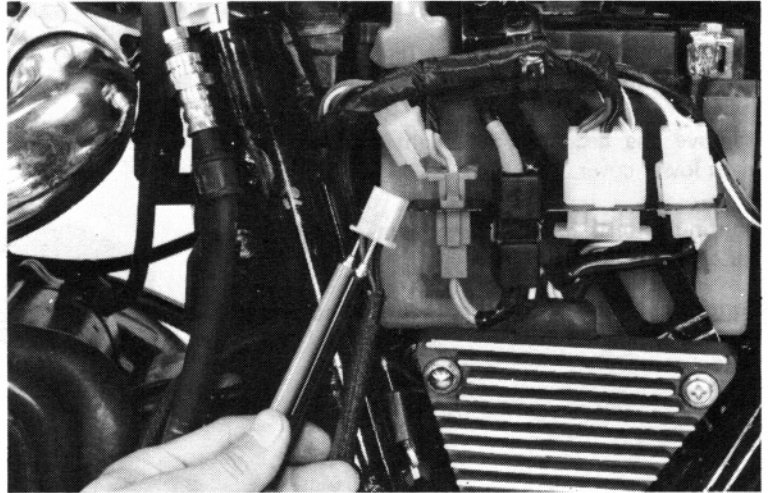


NEUTRAL/OD SWITCHES

Remove the left side cover and disconnect the neutral/OD switch coupler.

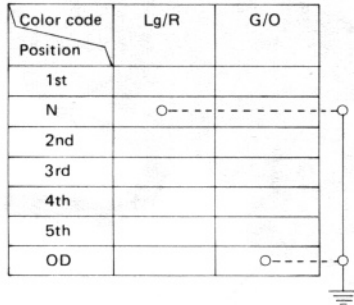


REMOVAL/INSTALLATION

Remove the alternator cover (page 8-2). Disconnect the wire from the switch and remove the switch.

Install the neutral and OD switches in the reverse order of removal.

TORQUE: 10–14 N·m (1.0–1.4 kg·m, 7–10 ft·lb)

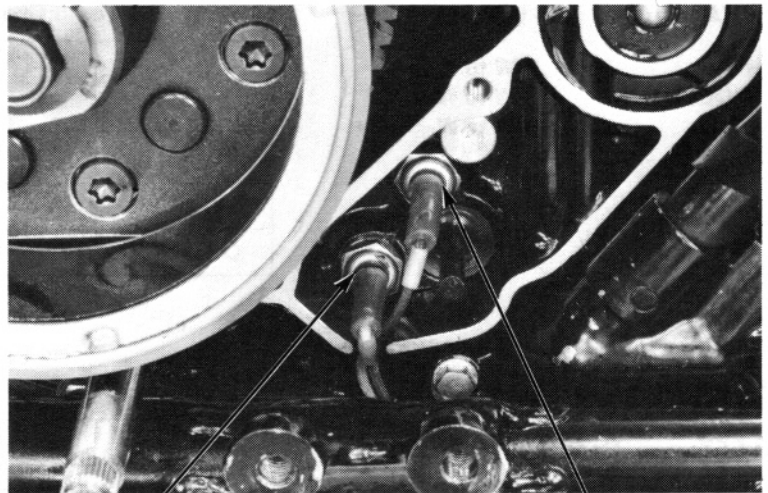


NEUTRAL SWITCH

OD SWITCH

CLUTCH SWITCH

Check continuity of the clutch lever (safety) switch with the clutch released and applied. Replace if necessary.

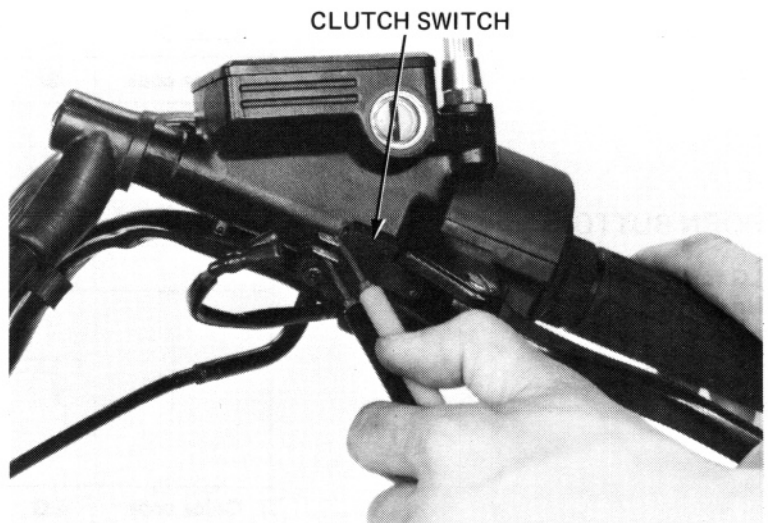

CLUTCH APPLIED: CONTINUITY
CLUTCH RELEASED: NO CONTINUITY