

## REAR COWL

### REMOVAL/INSTALLATION


Remove the following:

- Side covers (page 2-2)
- Seat (page 2-2)
- Rear carrier (page 2-2)

Remove the bolts [1].

Remove the rear cowl [2] by releasing its rubber [3] from the number plate bracket [4].

Installation is in the reverse order of removal.

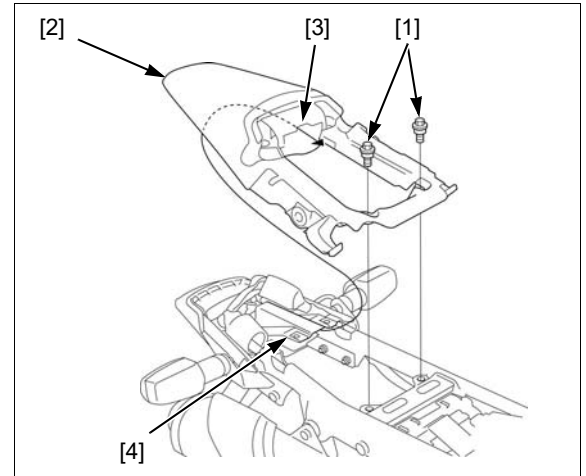

## NUMBER PLATE BRACKET

### REMOVAL/INSTALLATION

Remove the following:


- Side covers (page 2-2)
- Seat (page 2-2)
- Rear carrier (page 2-2)
- Rear cowl (page 2-3)

Disconnect the brake/tail light 3P connector [1].

Remove the bolts [2], collars [3], clamps [4] and mount rubbers [5].

Remove the number plate bracket [6].

Installation is in the reverse order of removal.

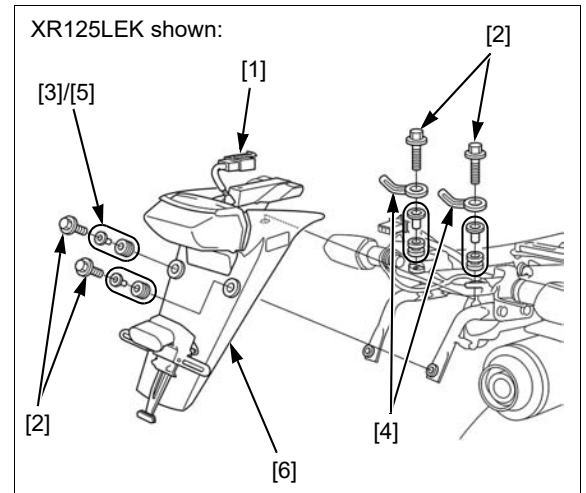

### DISASSEMBLY/ASSEMBLY

Remove the license light (page 18-5).

Remove the screws [1], mount rubbers [2], collars [3] and brake/tail light [4].

Assembly is in the reverse order of disassembly.

