


DISASSEMBLY/ASSEMBLY

Remove the screws [1] and plates [2], then separate the visor [3], headlight rubber [4], inner visor [5] and headlight [6].

Assembly is in the reverse order of disassembly.

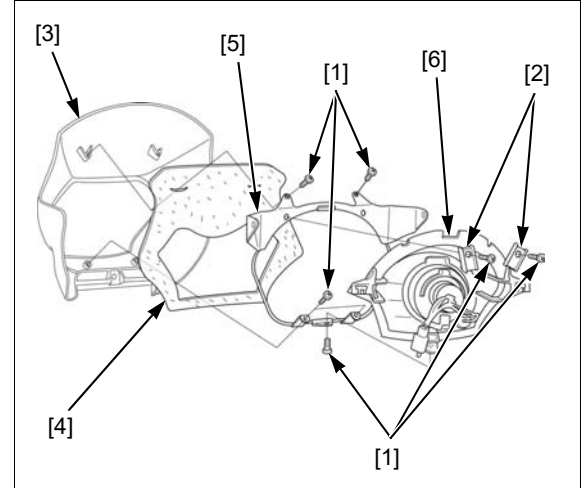


FRONT FENDER

REMOVAL/INSTALLATION

Remove the bolts [1].
Remove the front fender [2], headlight aim adjuster [3] and collars [4].

Installation is in the reverse order of removal.

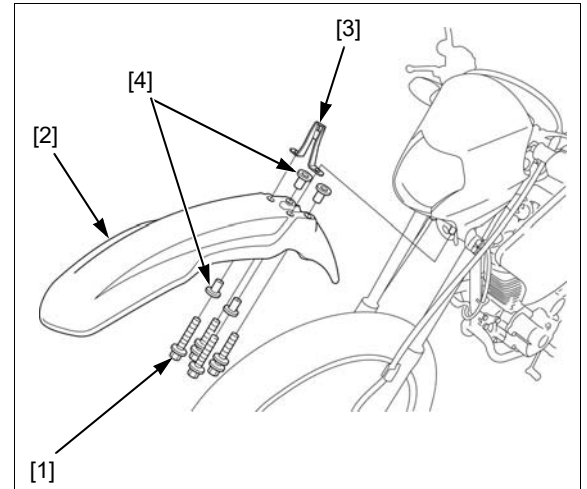

DRIVE SPROCKET COVER

REMOVAL/INSTALLATION

Remove the bolts [1], then remove the drive sprocket cover [2] and drive chain guide [3].

Installation is in the reverse order of removal.

