

MAINTENANCE


AIR CLEANER

- The viscous paper element cannot be cleaned because the element contains a dust adhesive.
- If the motorcycle is used in unusually wet or dusty areas, more frequent inspections are required.

Remove the following:

- Side covers (page 2-2)
- Seat (page 2-2)

Remove the screws [1] and air cleaner case cover [2].

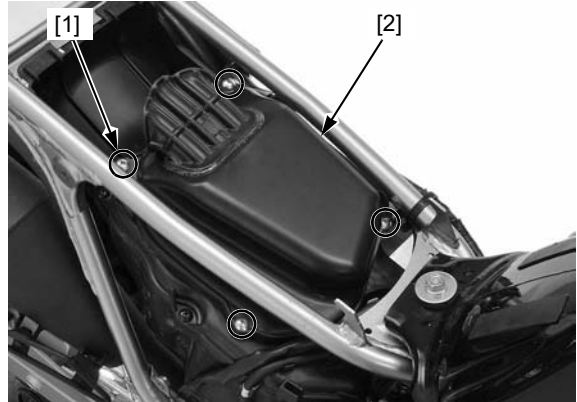

Remove the air cleaner element screws [1].


Replace the element [2] in accordance with the maintenance schedule or anytime it is excessively dirty or damaged.

Check that the packings in good condition, replace them if necessary.

Install the removed parts in the reverse order of removal.

TORQUE:

- Air cleaner element screw:**
1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)
- Air cleaner case cover screw:**
1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)

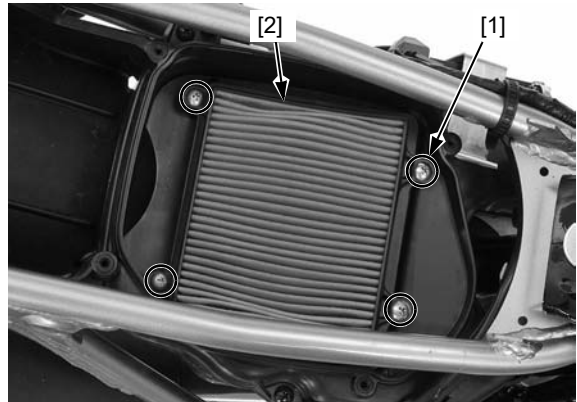

AIR CLEANER SUB FILTER (XR125LK/LEK)

Remove the following:

- Side shroud (page 2-4)
- Fuel tank (page 2-4)

Check the air cleaner sub filter [1] and replace if necessary.

When replacing the sub filter, remove the following.

Disconnect the air cleaner sub filter-to-PAIR control valve hose [2].

Disconnect the air cleaner sub filter-to-three way joint hose [3] and remove the air cleaner sub filter.

Installation is in the reverse order of removal.

Install the air filter, turning its arrow mark [4] in the direction as shown in the illustration.

