


SPROCKET INSPECTION

Remove the drive sprocket cover (page 2-5).

Inspect the drive and driven sprocket teeth for wear [1] or damage [2], replace if necessary.

Never use a new drive chain on worn sprockets.

Both chain and sprockets must be in good condition [3], or new replacement chain will wear rapidly.

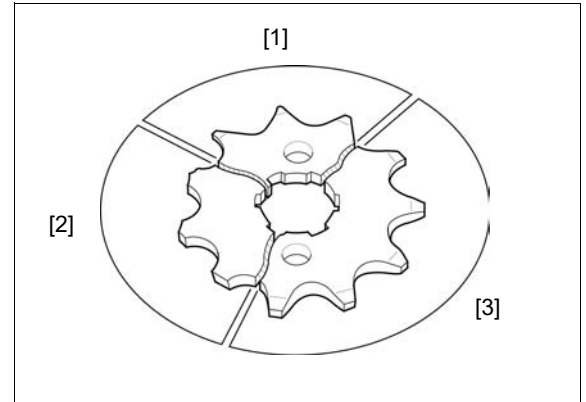

Check the attaching bolts and nuts on the drive and driven sprockets.


If any are loose, torque them.

TORQUE:

[1] Drive sprocket fixing plate bolt:
12 N·m (1.2 kgf·m, 9 lbf·ft)

[2] Driven sprocket nut:
32 N·m (3.3 kgf·m, 24 lbf·ft)

Install the drive sprocket cover (page 2-5).

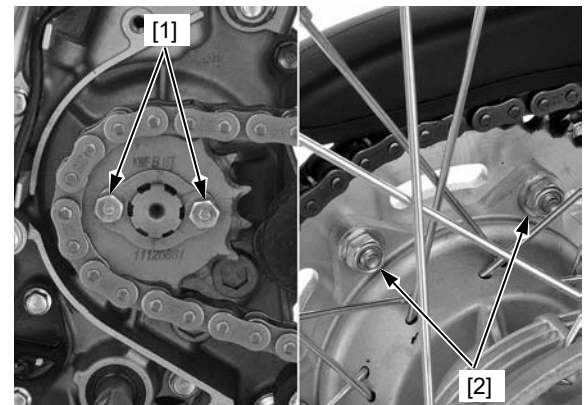

DRIVE CHAIN SLIDER

Remove the drive sprocket cover (page 2-5).

Check the drive chain slider [1] for wear or damage. Replace the drive chain slider if it is worn up to the wear limit.

Refer to procedure for swingarm removal/installation (page 15-13).

