

*Tire pressure should be checked when the tires are cold.*

Check the cold tire pressure.

**RECOMMENDED TIRE PRESSURE AND TIRE SIZE:**

		XR125LK/LEK		XL125LK	
		FRONT	REAR	FRONT	REAR
Tire pressure kPa (kgf/cm <sup>2</sup> , psi)	Driver only	150 (1.5, 22)	150 (1.5, 22)	150 (1.5, 22)	150 (1.5, 22)
	Driver and passenger	150 (1.5, 22)	200 (2.0, 29)	150 (1.5, 22)	225 (2.25, 33)
Tire size		90/90-19M/C (52P)	110/90-17M/C (60P)	70/100-21M/C (44P)	100/90-18M/C (56P)
Tire brand		C6559F (CHENG SHIN)	C6559 (CHENG SHIN)	CM-704 (CHENG SHIN)	CM-705 (CHENG SHIN)

Check the tires for cuts, embedded nails, or other damage.  
Check the front wheel (page 14-9) and rear wheel (page 15-4) for trueness.


Measure the tread depth at the center of the tires.  
Replace the tires when the tread depth reaches the following limits.

**MINIMUM TREAD DEPTH:**  
**FRONT: 3.0 mm (0.12 in)**  
**REAR: 3.0 mm (0.12 in)**

Inspect the wheel rims and spokes for damage.  
Tighten any loose spokes.

**TOOL:**  
**[1] Spoke wrench, 5.8 x 6.1 mm 07701 – 0020300**

**TORQUE: 3.7 N·m (0.4 kgf·m, 2.7 lbf·ft)**

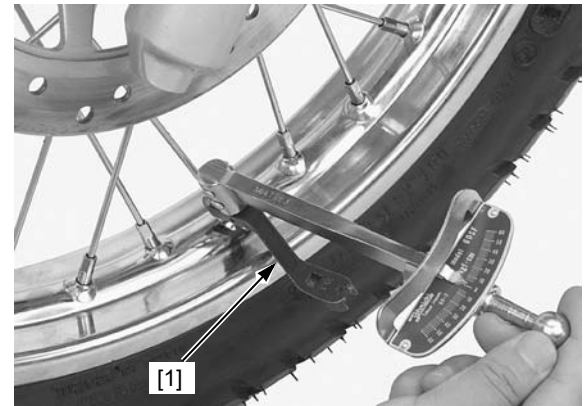

**STEERING HEAD BEARINGS**

Raise the front wheel off the ground by placing a work stand or box under the engine.

Check that the handlebar moves freely from side to side. Make sure the control cables do not interfere with the handlebar rotation.

If the handlebar moves unevenly, binds, or has vertical movement, inspect the steering head bearings (page 14-22).