



## FUEL SYSTEM

Except CO, III LA types: Remove the screw [1] and carburetor heater cover [2].

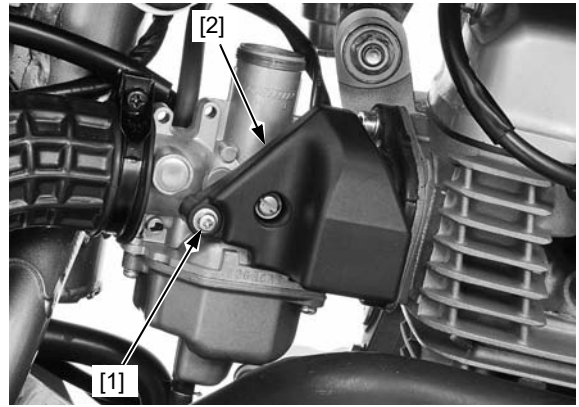

Except CO, III LA types: Disconnect the carburetor heater connector [1] and ground wire connector [2].

Release the carburetor heater wire from the clamp [3].

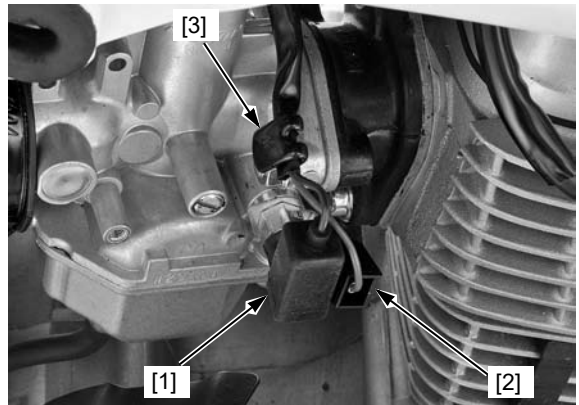

Loosen the connecting boot band screw [1]. Remove the carburetor mounting nuts [2] and wire clamp [3], then remove the carburetor [4] from the insulator.

