


FUEL SYSTEM

Install the throttle valve spring [1] onto the throttle cable [2].
Connect the throttle cable to the throttle valve [3] while compressing the throttle valve spring.

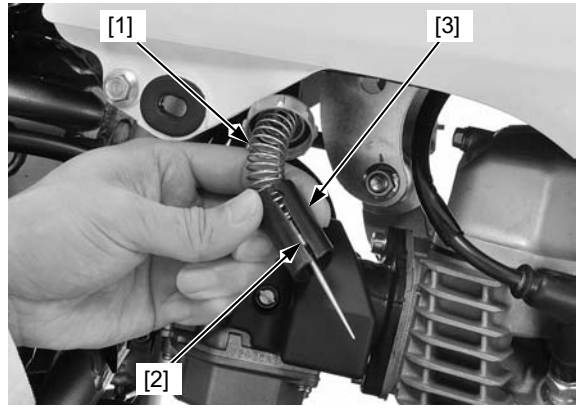

Be careful not to damage the jet needle when installing the throttle valve [1] into the carburetor body.

Install the throttle valve while aligning its cut-out [2] with the throttle stop screw [3].


Tighten the carburetor top securely.

Install the following:

- Right side cover (page 2-2)
- Right side shroud (page 2-4)

After installing the throttle valve, check the following.


- Throttle grip free play (page 3-3)
- Engine idle speed (page 3-8)

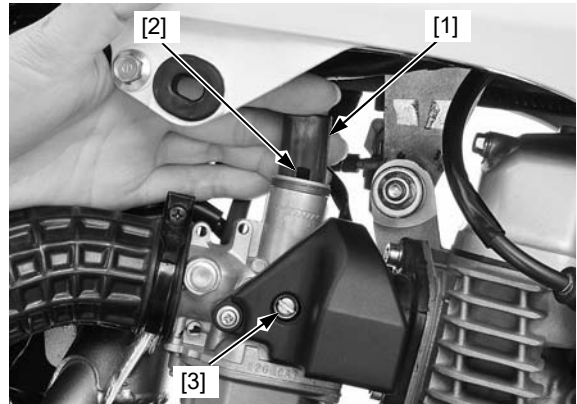

CARBURETOR HEATER (EXCEPT CO, III LA TYPES)

CARBURETOR HEATER REMOVAL/INSTALLATION

Remove the screw [1] and carburetor heater cover [2].

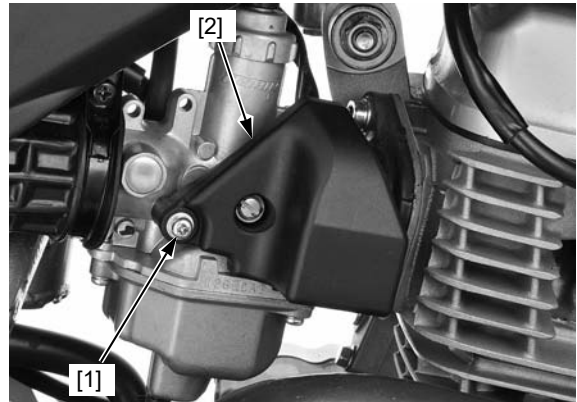

Disconnect the carburetor heater connector [1] and ground wire connector [2].

